

7. Clear Memory Mode

A: OPERATION

- 1) On the «Main Menu» display screen, select {Each System Check}.
- 2) On the «System Selection Menu» display screen, select the {Engine Control System}.
- 3) Select the [OK] after the information of engine type is displayed.
- 4) On the «Engine Diagnosis» display screen, select the {Clear Memory}.
- 5) When «Done» and «Turn ignition switch to OFF» is shown on the display screen, turn the ignition switch to OFF and finish the Subaru Select Monitor.

NOTE:

- After the memory has been cleared, the idle air control solenoid valve must be initialized. To execute this procedure, turn the ignition switch to ON. Wait for 3 seconds before starting the engine.
- For detailed operation procedure, refer to the “PC application help for Subaru Select Monitor”.