

## List of Diagnostic Trouble Code (DTC)

IMMobilizer (DIAGNOSTICS)

### 9. List of Diagnostic Trouble Code (DTC)

#### A: LIST

DTC	Item	Contents of diagnosis	Index No.
P1571	Reference Code Incompatibility	Reference code incompatibility between IMM ECM and ECM	<Ref. to IM(diag)-13, DTC P1571 REFERENCE CODE INCOMPATIBILITY, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1572	IMM Circuit Failure (Expect Antenna Circuit)	Communication failure between IMM ECM and ECM	<Ref. to IM(diag)-14, DTC P1572 IMM CIRCUIT FAILURE (EXCEPT ANTENNA CIRCUIT), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1574	Key Communication Failure	Failure of IMM ECM to verify key (transponder) ID code or transponder key failure	<Ref. to IM(diag)-17, DTC P1574 KEY COMMUNICATION FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0513	Incorrect Immobilizer Key	Incorrect immobilizer key (Use of unregistered key in IMM ECM)	<Ref. to IM(diag)-18, DTC P0513 INCORRECT IMMobilizer KEY, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1576	EGI Control Module EEPROM	ECM malfunctioning	<Ref. to IM(diag)-18, DTC P1576 EGI CONTROL MODULE EEPROM, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1577	IMM Control Module EEPROM	IMM ECM malfunctioning	<Ref. to IM(diag)-19, DTC P1577 IMM CONTROL MODULE EEPROM, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1570	Antenna	Faulty antenna	<Ref. to IM(diag)-20, DTC P1570 ANTENNA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

#### NOTE:

Perform the engine DTC when a DTC other than immobilizer DTC is detected. <Ref. to EN(H4DOTC)(diag)-76, List of Diagnostic Trouble Code (DTC).>