

General Description

INSTRUMENTATION/DRIVER INFO

1. General Description

A: SPECIFICATION

Combination meter	Speedometer	Electric pulse type
	Engine coolant temperature gauge	Cross coil type
	Fuel gauge	Cross coil type
	Tachometer	Electric pulse type
	Turn signal indicator light	14 V — 2 W
	Charge indicator light	14 V — 1.4 W
	Oil pressure warning light	LED
	ABS warning light	14 V — 1.4 W
	Malfunction indicator light	LED
	Hi-beam indicator light	14 V — 2 W
	Door open warning light	LED
	Seat belt warning light	LED
	Brake warning light	14 V — 2 W
	AWD warning light	LED
	Airbag warning light	LED
	Meter illumination light	14 V — 3.4 W, 14 V — 2 W
	AT OIL TEMP warning light	LED
	Cruise indicator light	14 V — 1.4 W
	Low fuel warning light	LED
	Security indicator light	LED
	Select indicator	LCD
	LCD back light	14 V — 1.4 W
	Cruise set indicator light	14 V — 1.4 W
	Vehicle dynamics control (VDC) indicator light	14 V — 3 W
	Vehicle dynamics control (VDC) warning light	LED
	Tire pressure warning light	14 V — 2 W

B: CAUTION

- Be careful not to damage the meters and instrument panel.
- Be careful not to damage the meter glass.
- Make sure the electrical connector is connected securely.
- After installation, make sure that each meter operates normally.
- Use gloves to avoid damage and getting fingerprints on the glass surface and meter surfaces.
- Do not apply excessive force to the printed circuit.
- Do not drop or otherwise apply impact.

C: PREPARATION TOOL

1. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.