


3. Combination Meter


A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Set the tilt steering at the lowest position.
- 3) Remove the screws and detach the meter visor.

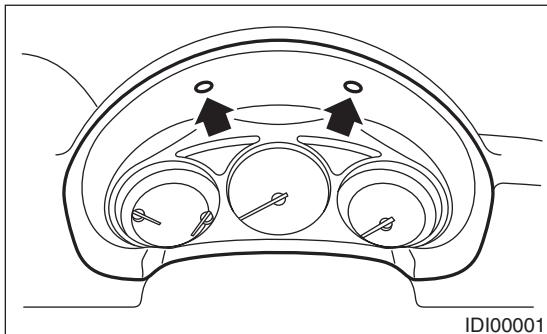

IDI00001

- 4) Remove the screws of combination meter and pull out the meter.

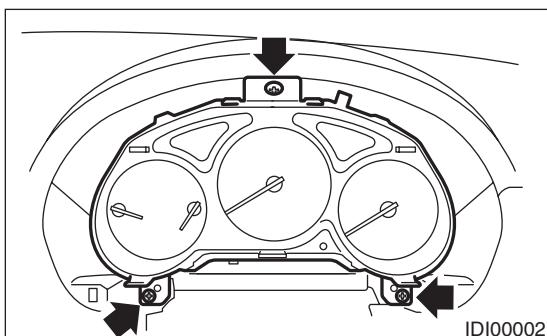

IDI00002

- 5) Disconnect the connector in the upper area of combination meter to remove the meter.

CAUTION:

- Be careful not to damage the meter or instrument panel.
- Be careful not to damage the meter glass.

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:


- Make sure the electrical connector is connected securely.
- Make sure that each meter operates normally.

C: DISASSEMBLY

CAUTION:


Use gloves to avoid damage and getting fingerprints on the glass surface and meter surfaces.

- 1) Disengage the claw (E) to remove case (B) from back cover (A).
- 2) Disengage claw (F) to remove meter glass (D) and reflector (C) from the inner case.

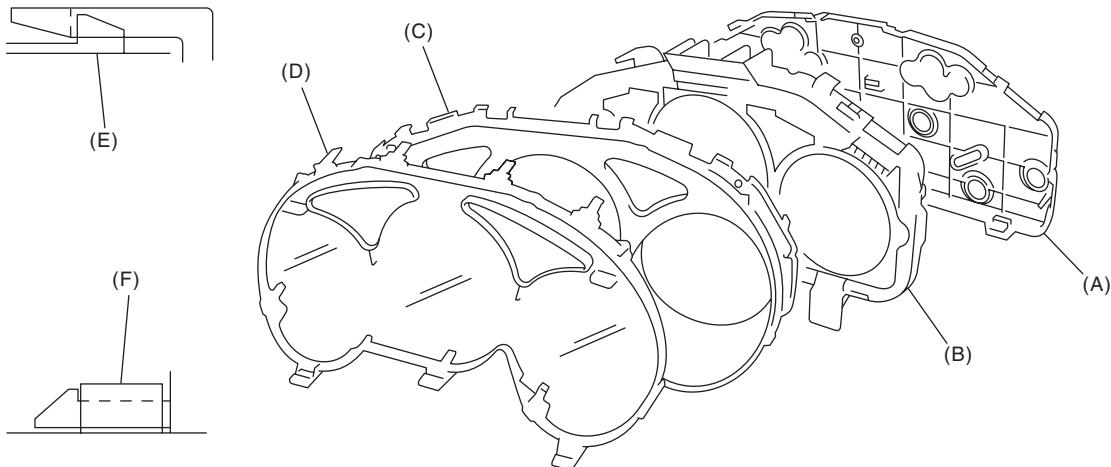


IDI00003

- 3) Pull up claw (A) in portion (B) of combination meter printed circuit (C) with combination pliers. Push out the speedometer (D) and tachometer (E) and engine coolant temperature gauge & fuel gauge assembly (F) using the hole (G).
- 4) Pull up the claw in the center of the combination meter printed circuit (C), and remove the printed circuit from case (H).

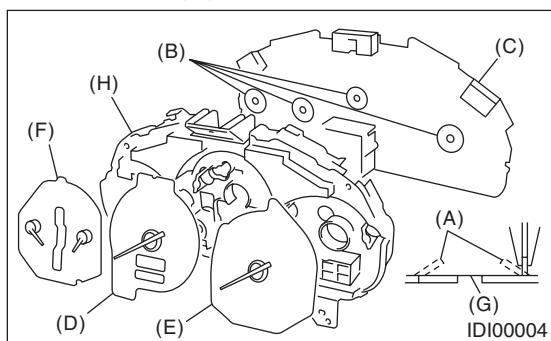

IDI00004

1. BULB REPLACEMENT

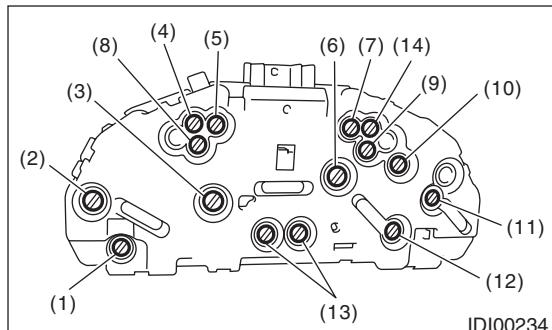

IDI00234

- (1) Charge indicator light
- (2) Tachometer
- (3) Speedometer and tachometer
- (4) HI-beam indicator light
- (5) Turn signal indicator light (Right)
- (6) Speedometer
- (7) Turn signal indicator light (Left)
- (8) Vehicle dynamics control (VDC) indicator
- (9) Brake warning light
- (10) ABS warning light
- (11) Fuel gauge
- (12) Engine coolant temperature gauge
- (13) LCD (Outside temperature display, odometer/ tripmeter, and select indicator)
- (14) Tire pressure warning light

D: ASSEMBLY

Assemble in the reverse order of disassembly.