

## 6. Fuel Gauge

### A: REMOVAL


Disassemble the combination meter, and then remove the engine coolant temperature gauge & fuel gauge assembly. <Ref. to IDI-11, DISASSEMBLY, Combination Meter.>

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

Measure the fuel gauge resistance.

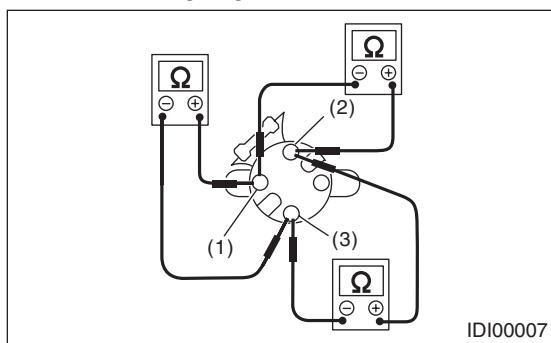

- (1) UNIT
- (2) IGN
- (3) GND

Terminals	Specified resistance
IGN and GND terminal	$170 \pm 10 \Omega$
IGN and UNIT terminal	$35 \pm 10 \Omega$
UNIT and GND terminal	$136 \pm 10 \Omega$

Replace the engine coolant temperature gauge & fuel gauge assembly if defective.

If OK, replace the combination meter printed circuit.