

7. Engine Coolant Temperature Gauge

A: REMOVAL


Disassemble the combination meter, and then remove the engine coolant temperature gauge & fuel gauge assembly. <Ref. to IDI-11, DISASSEMBLY, Combination Meter.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the engine coolant temperature gauge resistance.

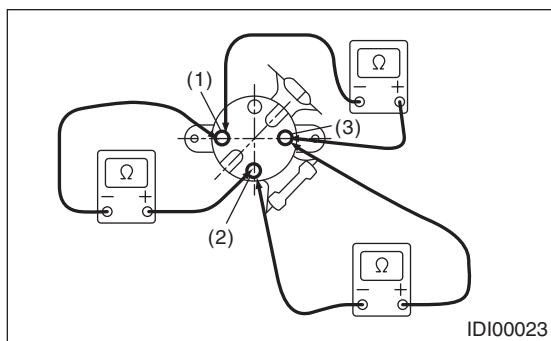

- (1) GND
- (2) IGN
- (3) UNIT

Terminals	Specified resistance
IGN and GND terminal	$208 \pm 10 \Omega$
IGN and UNIT terminal	$56 \pm 10 \Omega$
UNIT and GND terminal	$264 \pm 10 \Omega$

Replace the engine coolant temperature gauge & fuel gauge assembly if defective.

If OK, replace the combination meter printed circuit.