

General Description

LIGHTING SYSTEM

1. General Description

A: SPECIFICATION

Headlight		12 V — 55 W/60 W (Halogen) D2R 35 W/60 W (HID)
Front turn signal light		12 V — 21 W
Clearance light		12 V — 5 W
Front side marker light		12 V — 5 W
Front fog light		12 V — 51 W
Rear combination light	Tail/stop light	12 V — 5/21 W
	Turn signal light	12 V — 21 W
	Back-up light	12 V — 16 W
License plate light		12 V — 5 W
High-mounted stop light	Standard type	12 V — 13 W
	Rear spoiler built-in type	12 V — 1.3 W
Room light		12 V — 8 W
Spot map light		12 V — 8 W
Luggage room light		12 V — 5 W

B: CAUTION

- Before removing or installing parts, always disconnect the battery ground cable from battery. When replacing the radio, control unit, and other parts provided with memory functions, record the memory contents before disconnecting the battery ground cable. Otherwise, the memory is cleared.
- Reassemble the parts in the reverse order of disassembly procedure unless otherwise indicated.
- Adjust parts to the given specifications.
- Connect the connectors and hoses securely during reassembly.
- After reassembly, make sure functional parts operate smoothly.

WARNING:

- The airbag system wiring harness is routed near electrical parts and switches. All airbag system wiring harnesses and connectors are yellow. Do not use the electrical test equipment on these circuits.
- Be careful not to damage the airbag system wiring harness when servicing electrical parts and switches.

C: PREPARATION TOOL

1. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.