



14. Front Fog Light Assembly

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the front bumper. <Ref. to EI-20, REMOVAL, Front Bumper.>
- 3) Remove the lower side bolt.

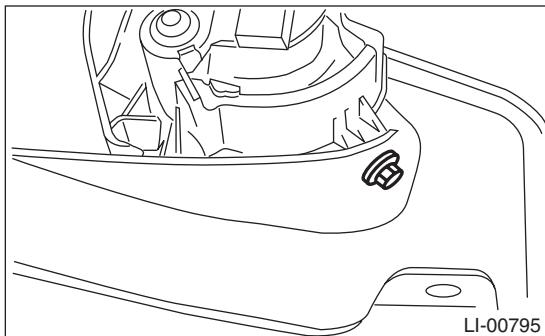

- 4) Remove the upper side clip, and then detach the fog light assembly.

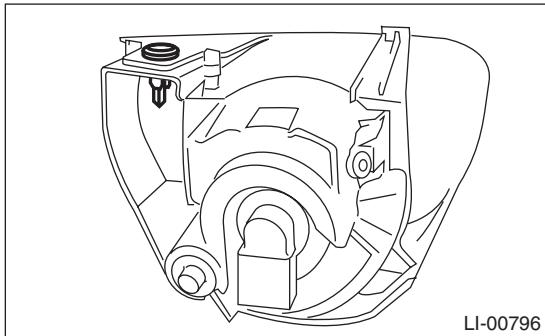

B: INSTALLATION

Install in the reverse order of removal.

C: ADJUSTMENT

Fog light aiming

NOTE:

Before checking the fog light beam level, be sure of the following:

- The area around the fog light does not have any scratch, damage or other type of deformation.

- Vehicle is parked on a level surface.

- The inflation pressure of tires is correct.


- Vehicle's fuel tank is full.

- 1) Bounce the vehicle several times to normalize the suspension.


- 2) Make certain that someone is seated in the driver's seat.

- 3) Measure the height of fog light center.

- 4) Disengage the three clips, and then turn over the mud guard.

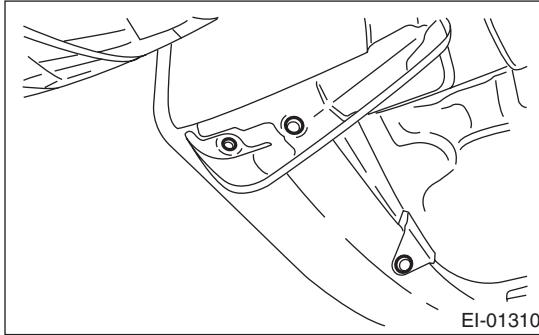


- 5) Adjust the front fog light pattern by inserting a Phillips screwdriver to the adjusting hole.

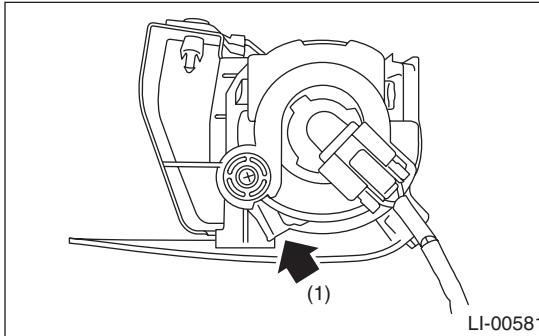

(1) Adjusting hole

Front Fog Light Assembly

LIGHTING SYSTEM

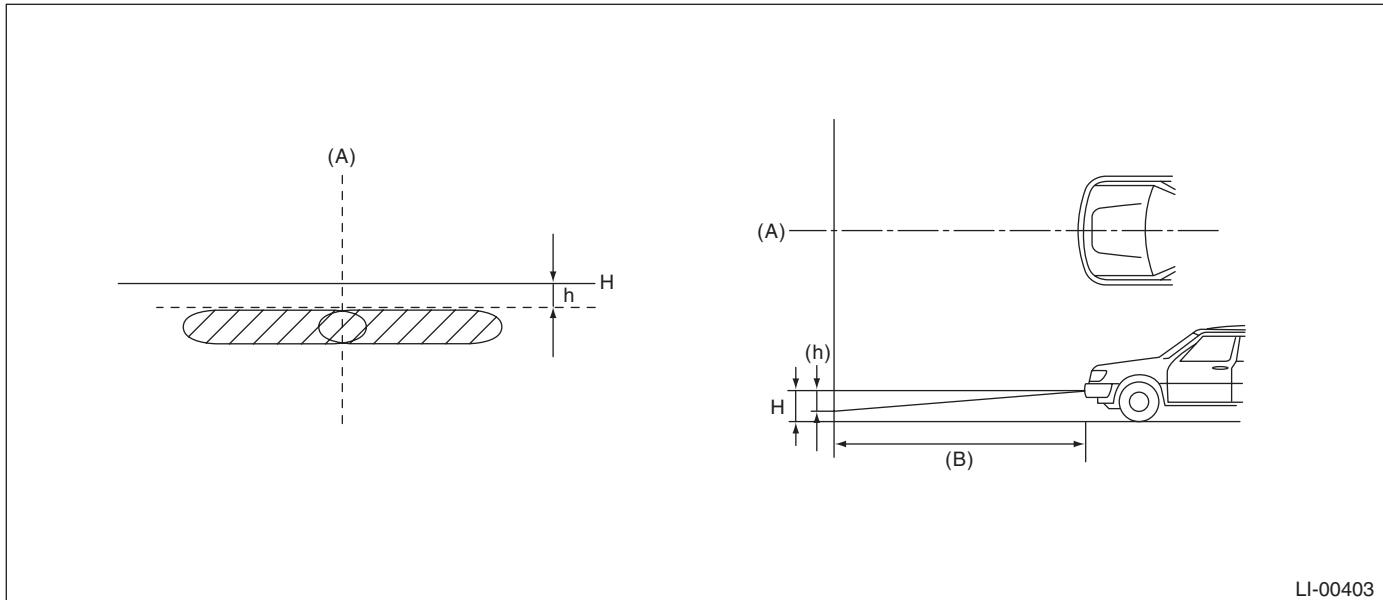

LI-00403

(A) Vehicle center

(B) 3 m (10 ft)

(H) Height of fog light center (mm)

h dimension mm (in)	39 (1.6)
---------------------	----------