


Electrical Component Location


OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

3. Electrical Component Location

A: LOCATION

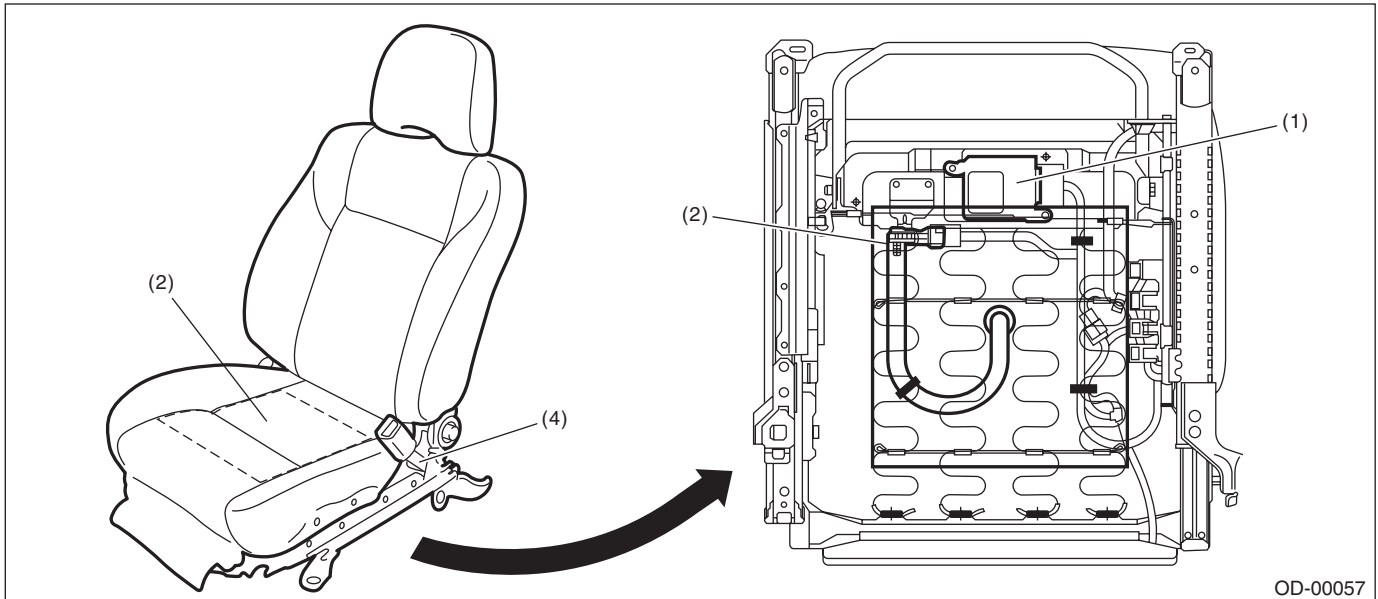


- (1) Occupant detection control module (3) Seat belt tension sensor (4) Buckle switch (Passenger's seat)
(2) Occupant detection sensor

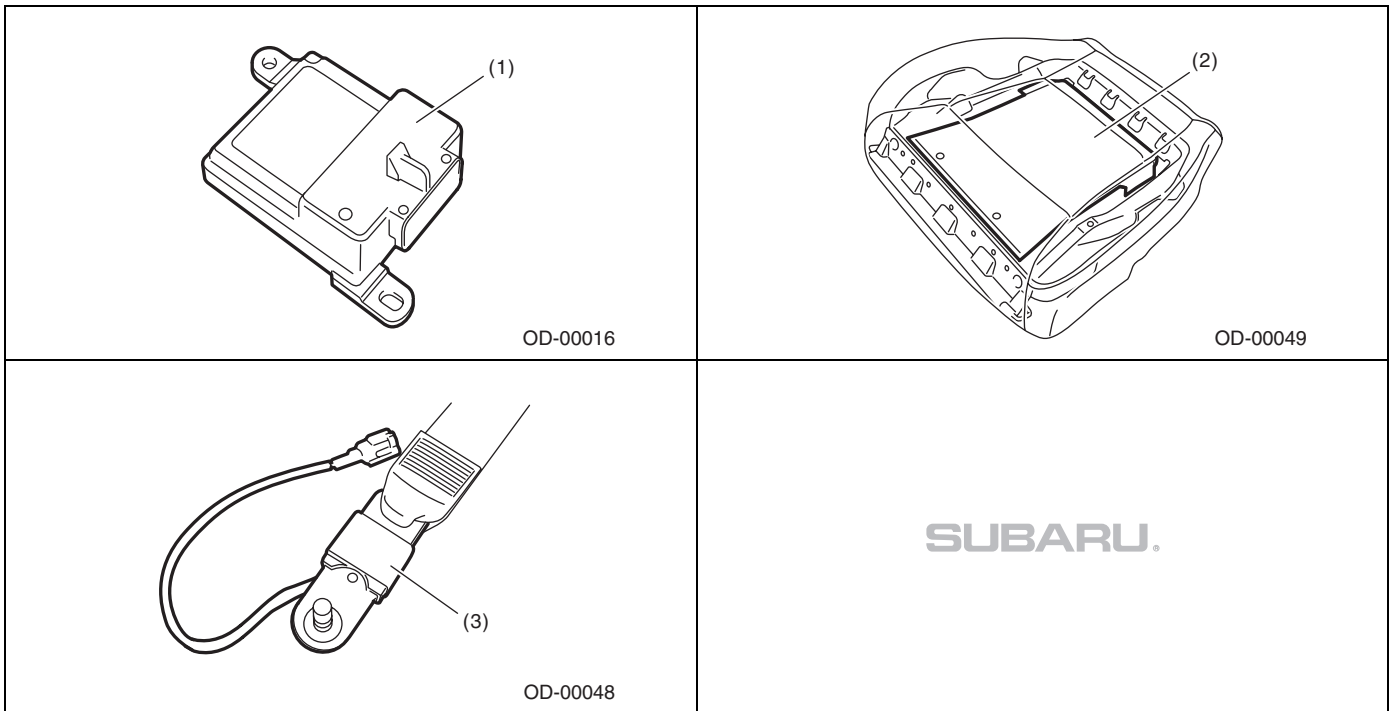

Electrical Component Location

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

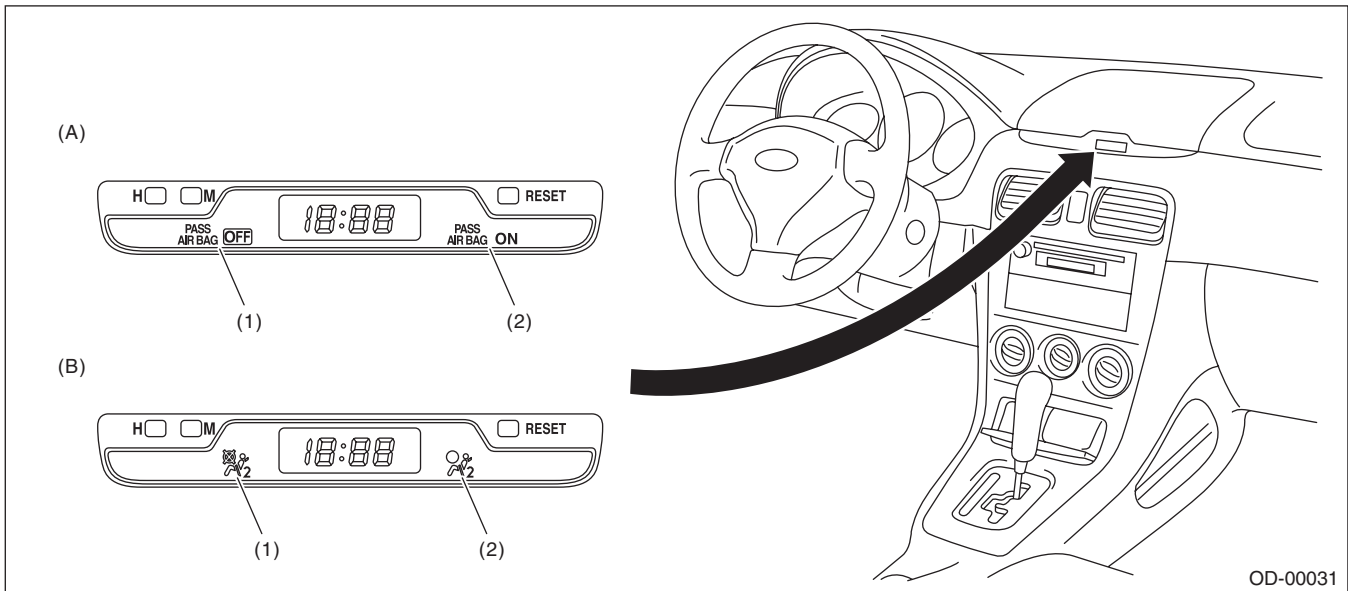

(A) For North America model

(B) For Canada model

(1) Passenger's airbag OFF indicator light

(2) Passenger's airbag ON indicator light