


## 4. Airbag Connector

### A: PROCEDURE

#### Buckle switch

##### 1) How to disconnect

- (1) Move the slide lock (A) in the direction of arrow.
- (2) With the slide lock (A) moved, disconnect the connector.

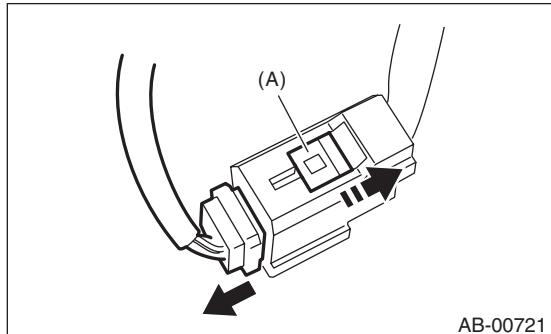


AB-00721

#### CAUTION:

When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.

##### 2) How to connect

Holding the connector (A), and push it in carefully until a clicking sound is heard.

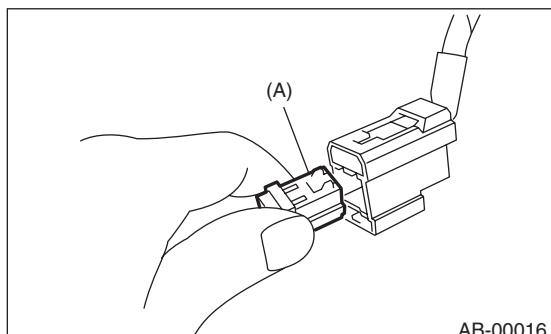

AB-00016

#### CAUTION:

Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.