

# General Description


## SEAT BELT SYSTEM

### 1. General Description

#### A: COMPONENT

##### 1. FRONT SEAT BELT

- Driver's side

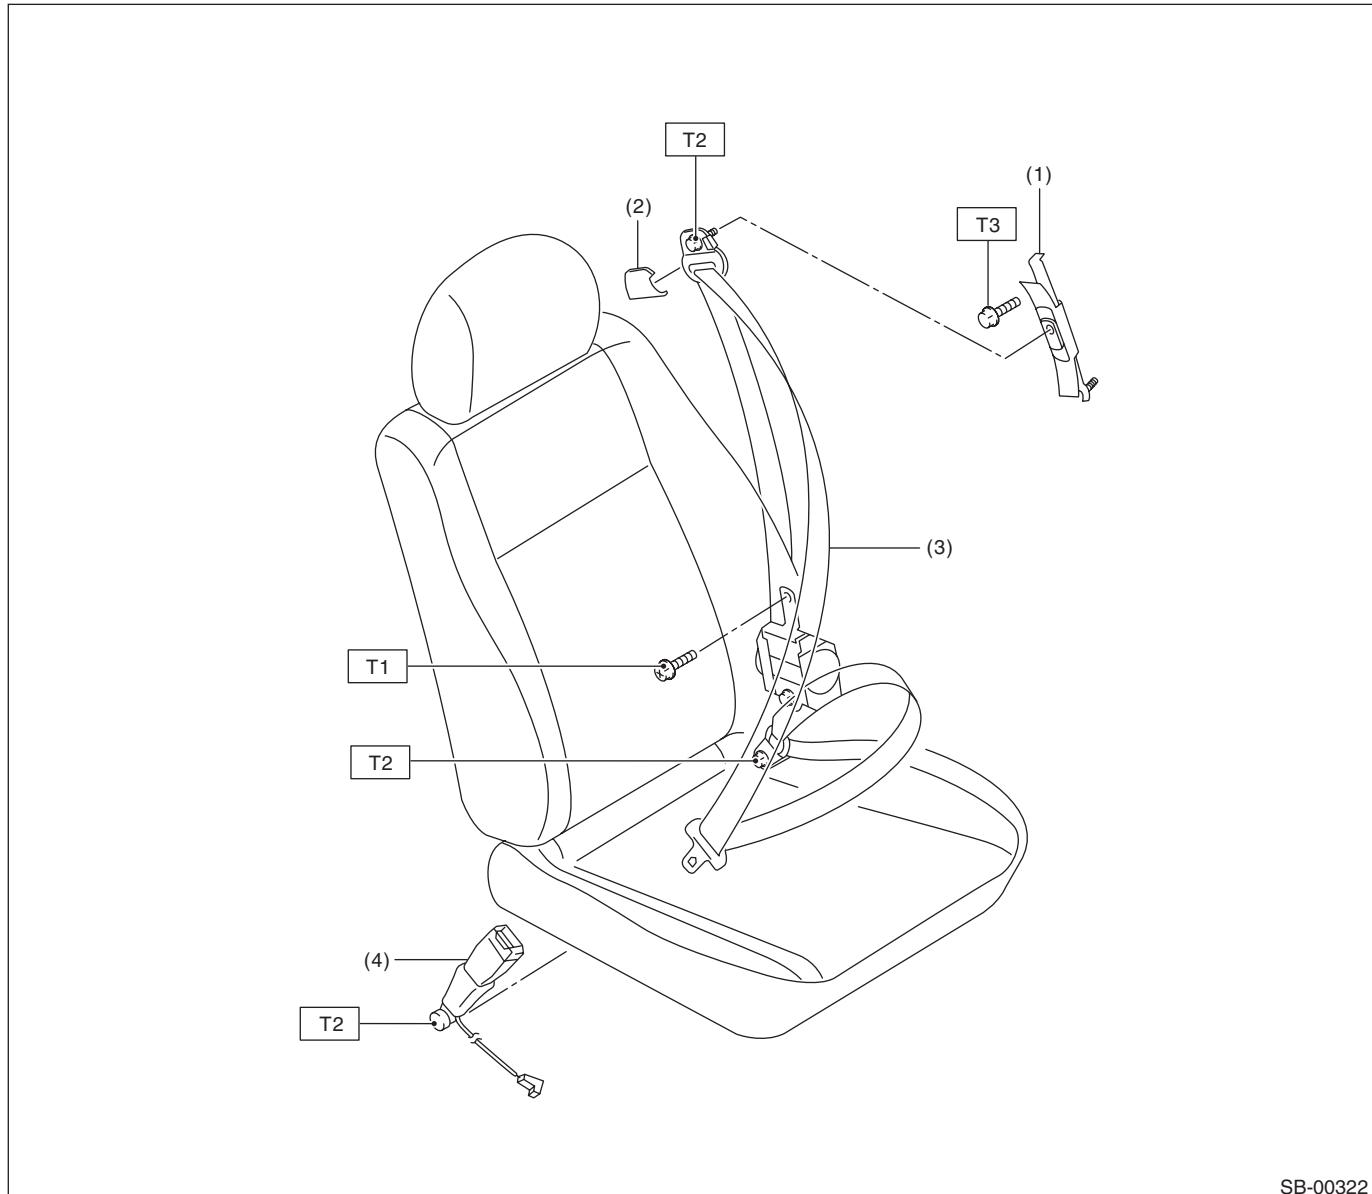

SB-00322

- (1) Adjustable anchor ASSY  
(2) Anchor cover

- (3) Outer belt ASSY  
(4) Inner seat belt ASSY

---

**Tightening torque:N·m (kgf·m, ft-lb)**

**T1: 7.5 (0.76, 5.5)**

**T2: 30 (3.1, 22)**


**T3: 53 (5.4, 39)**

---

# General Description

## SEAT BELT SYSTEM

- Passenger's side

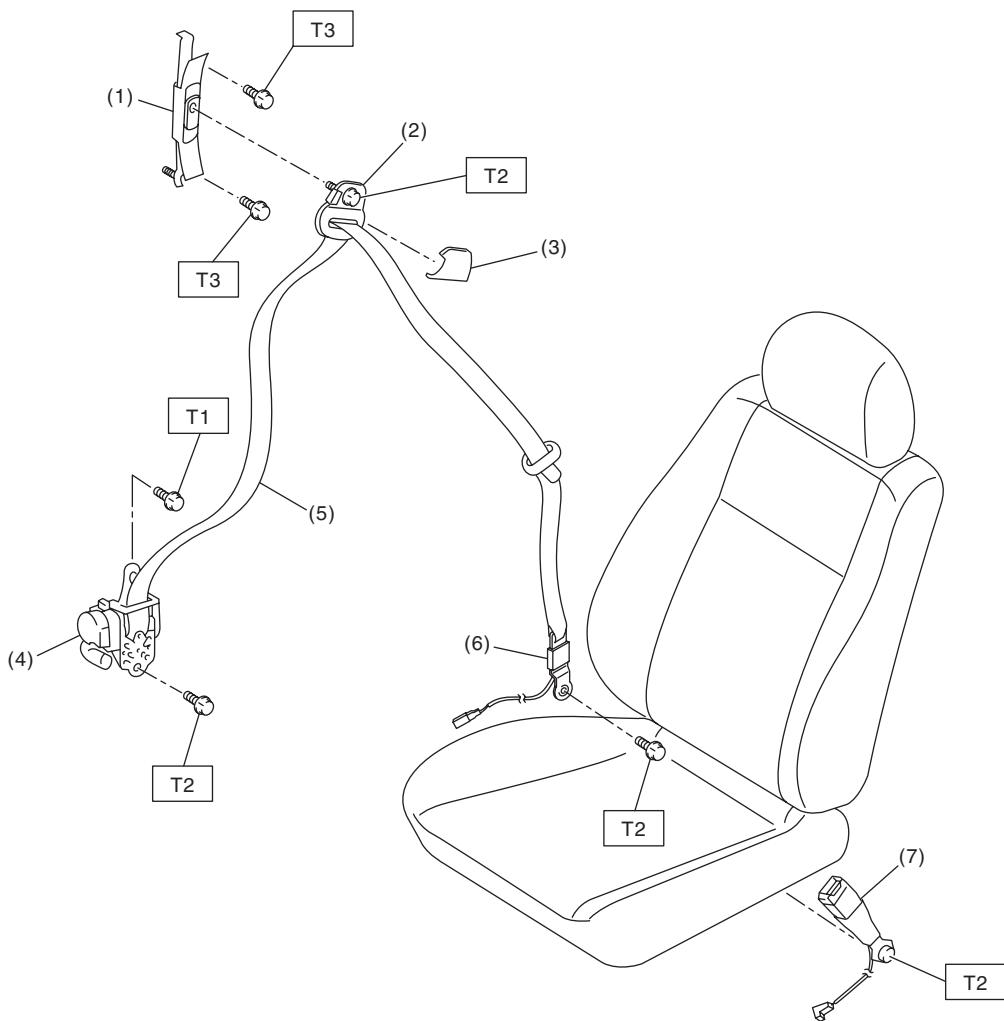

SB-00332

- |                            |                          |
|----------------------------|--------------------------|
| (1) Adjustable anchor ASSY | (5) Outer belt ASSY      |
| (2) Shoulder anchor        | (6) Belt tension sensor  |
| (3) Anchor cover           | (7) Inner seat belt ASSY |
| (4) Seat belt retractor    |                          |

---

**Tightening torque:N·m (kgf·m, ft·lb)**

**T1: 7.5 (0.76, 5.5)**

**T2: 30 (3.1, 22)**


**T3: 53 (5.4, 39)**

---

# General Description

## SEAT BELT SYSTEM

### 2. REAR SEAT BELT

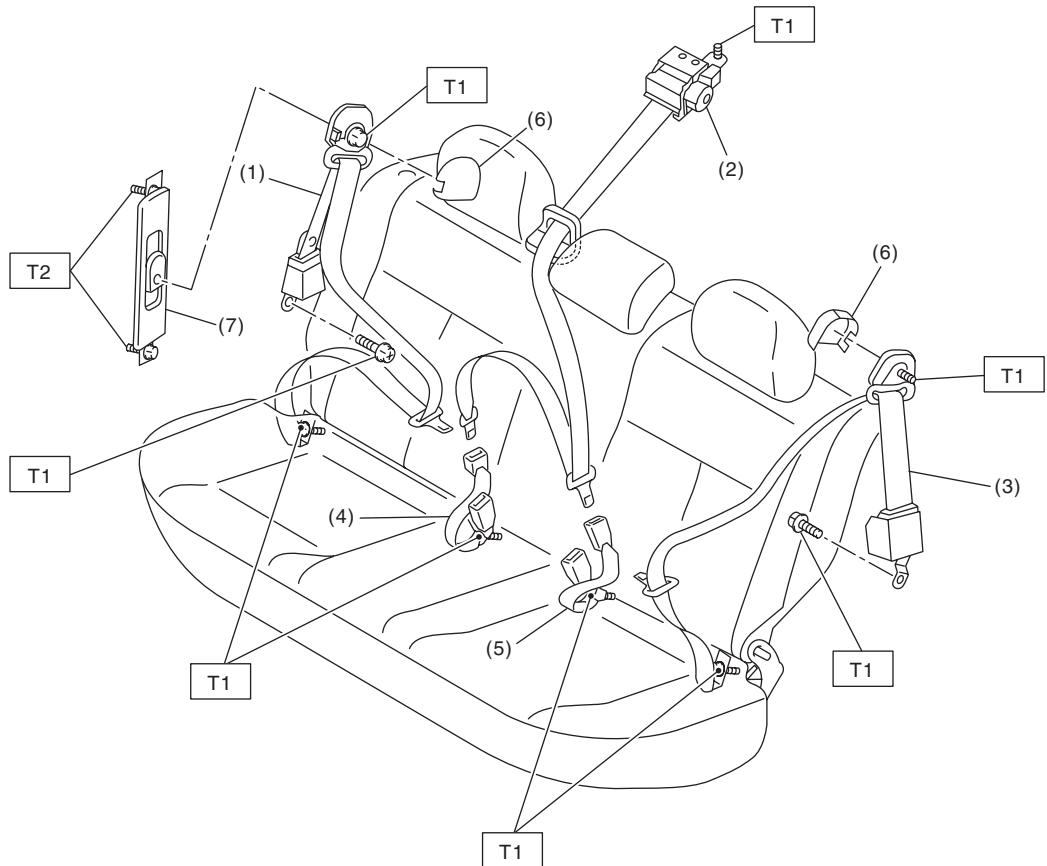

SB-00057

- |                            |                            |
|----------------------------|----------------------------|
| (1) Outer seat belt RH     | (5) Inner seat belt LH     |
| (2) Outer seat belt center | (6) Anchor cover           |
| (3) Outer seat belt LH     | (7) Adjustable anchor ASSY |
| (4) Inner seat belt RH     |                            |

***Tightening torque:N·m (kgf·m, ft·lb)***

***T1: 30 (3.1, 22)***

***T2: 53 (5.4, 39)***

### B: CAUTION

- Before starting the work, turn the ignition switch to OFF, disconnect the battery ground cable and wait for 20 seconds or more.
- The pretensioner system has a backup power source. Be careful because the pretensioner might deploy if you do not wait for 20 seconds or more before starting work.
- Do not drop or apply any impact to the pretensioner.
- If oil, grease or water gets on the pretensioner, wipe it off immediately with a dry cloth.
- Do not expose the pretensioner to high temperature or flame.
- Do not allow current to flow through or voltage to reach the pretensioner. Do not use a circuit tester to check resistance of the pretensioner.
- Do not disassemble or attempt to repair the pretensioner. If it is dented, cracked or deformed, replace it with a new part.
- Do not use the airbag or pretensioner parts from other vehicles. Always replace the parts with new parts.
- When handling a seat belt with deployed pretensioner, wear gloves and goggles. Wash your hands afterwards.
- Do not reuse a seat belt with deployed pretensioner.
- If the material gets in your eyes or on your skin during deployment, wash it away with clean water, and then consult a doctor.