



3. Rear Seat

A: REMOVAL


1) Remove the bolt to remove the rear seat cushion.

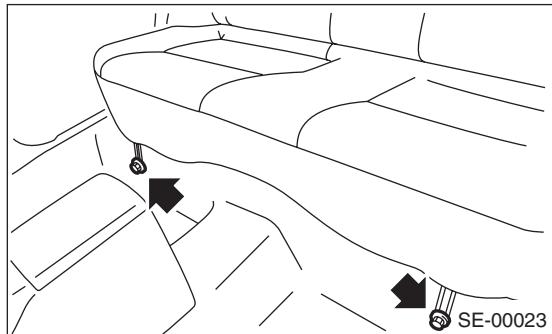

- 2) Remove the headrest.
- 3) Remove the luggage floor mat. <Ref. to EI-48, REMOVAL, Luggage Floor Mat.>
- 4) Turn over the rear seat backrest.
- 5) Turn over the seat cover to remove the bolt.

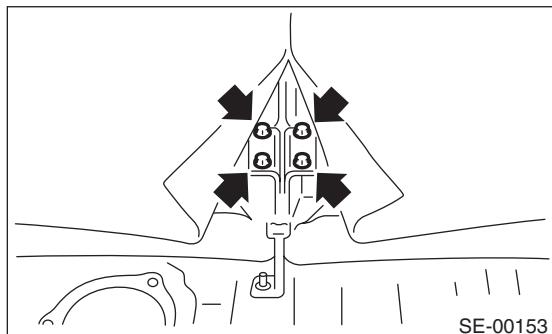

- 6) Remove the rear seat backrest.

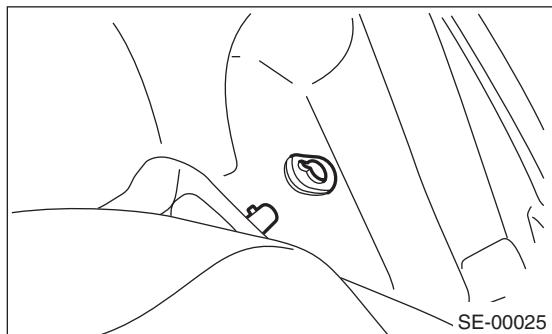

B: INSTALLATION


Install in the reverse order of removal.

Tightening torque:


Refer to "COMPONENT" of "General Description". <Ref. to SE-5, REAR SEAT, COMPONENT, General Description.>

C: DISASSEMBLY


- 1) Remove the rear seat. <Ref. to SE-17, REMOVAL, Rear Seat.>
- 2) Remove the hog rings (A) from the vicinity of the seat backrest.

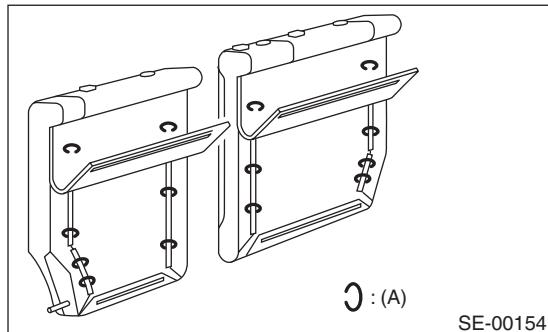


- 3) Remove the hog rings (A) on the front side of cushion pad, then remove the cover.

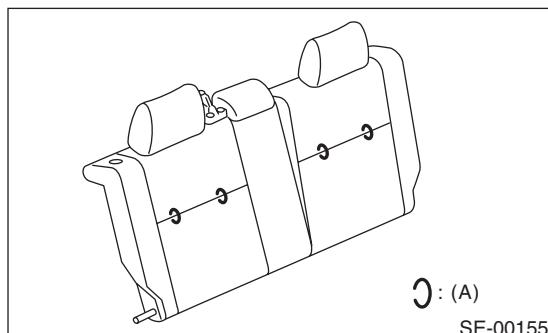

- 4) Remove the hog rings (A) from the vicinity of the seat cushion.

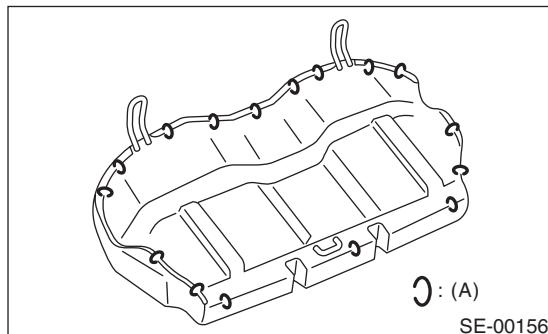

- 5) Remove the hog rings (A), and then remove the cover.

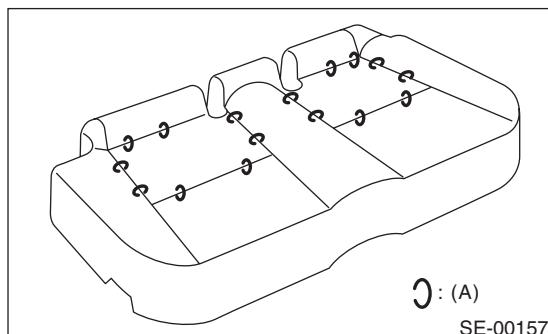

D: ASSEMBLY

Assemble in the reverse order of disassembly.

NOTE:

- Do not contaminate or damage the cover.
- While installing the hog rings, prevent the seat from getting wrinkled.