

10. Rear Outer Handle

A: REMOVAL

1) Remove the rear door trim. <Ref. to EI-34, REMOVAL, Rear Door Trim.>

CAUTION:


Do not apply excessive force to remove the door trim. This can deform the door panel.

2) Remove the sealing cover. <Ref. to EB-16, REMOVAL, Rear Sealing Cover.>

3) Remove the rear inner remote. <Ref. to SL-32, REMOVAL, Rear Inner Remote.>

4) Remove the rear door latch assembly. <Ref. to SL-34, REMOVAL, Rear Door Latch and Door Lock Actuator Assembly.>

5) Remove the two bolts, and then detach the rear outer handle.

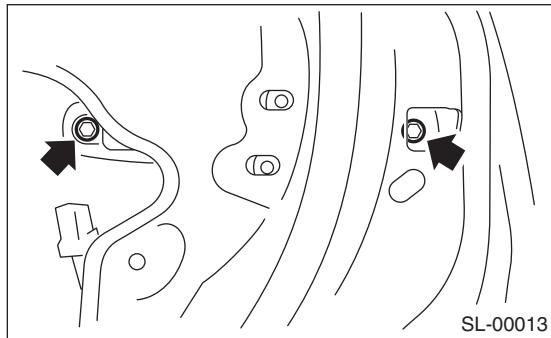

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf·m, 5.5 ft-lb)

NOTE:

Make sure the outer handle works properly by opening/closing the door after installation.

C: INSPECTION

After the installation, inspect the following items.

- Does the plastic lever move smoothly?
- Does the plastic lever have any deformation, cracks, or damage?