


## 11. Rear Door Latch and Door Lock Actuator Assembly

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the rear door trim. <Ref. to EI-34, REMOVAL, Rear Door Trim.>
- 3) Remove the sealing cover. <Ref. to EB-16, REMOVAL, Rear Sealing Cover.>
- 4) Remove the rear inner remote. <Ref. to SL-32, REMOVAL, Rear Inner Remote.>
- 5) Remove the three screws and one bolt.

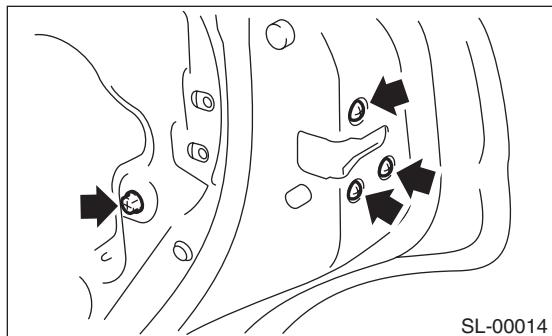

- 6) Disconnect the connector and then detach the rear door latch assembly.

### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

##### *Door latch mounting screw*

$6.5 \text{ N}\cdot\text{m (0.66 kgf-m, 4.8 ft-lb)}$

##### *Door lock actuator mounting bolt*

$7.5 \text{ N}\cdot\text{m (0.76 kgf-m, 5.5 ft-lb)}$

#### NOTE:

Make sure the door lock works properly after installation.

### C: INSPECTION

After the installation, inspect the following items.

- Do the lever, rod and cable move smoothly?
- Does the cable have any snags?