


13. Rear Gate Outer Handle

A: REMOVAL

- 1) Remove the rear gate trim. <Ref. to EI-46, REMOVAL, Rear Gate Trim.>
- 2) Remove the rear wiper motor assembly. <Ref. to WW-16, REMOVAL, Rear Wiper Motor.>
- 3) Remove the rear finisher light.
- 4) Remove the cable and the two nuts.

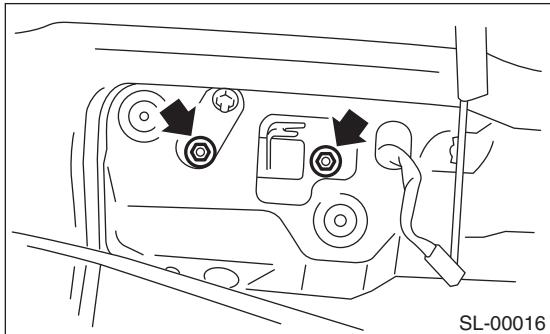

- 5) Remove the rear gate outer handle.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf·m, 5.5 ft-lb)

NOTE:

Make sure the outer handle works properly by opening/closing the rear gate after installation.

C: INSPECTION

After the installation, inspect the following items.

- Do the lever and cable move smoothly?
- Does the cable have any snags?