


## 17. Remote Openers

### A: REMOVAL


#### 1. FRONT HOOD OPENER

- 1) Remove the hood lock assembly. <Ref. to SL-39, REMOVAL, Front Hood Lock Assembly.>
- 2) Remove the release cable from hood lock.
- 3) Remove the bolt, and then detach the opener lever.

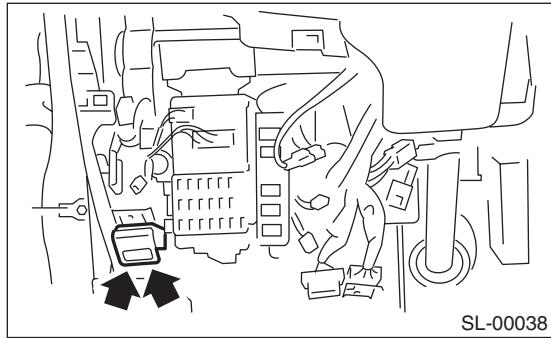


#### 2. FUEL FLAP OPENER

- 1) Remove the rear seat. <Ref. to SE-17, REMOVAL, Rear Seat.>
- 2) Remove the center pillar lower trim, and side sill cover of front and rear. Remove the rear pillar lower trim. Remove the floor mat. <Ref. to EI-42, REMOVAL, Lower Inner Trim.>
- 3) Remove the rear quarter trim RH. <Ref. to EI-43, REMOVAL, Rear Quarter Trim.> Remove the clip holding cable (A).
- 4) Remove the bolt, and then detach the opener pull handle (B).
- 5) Remove the cable (A) from opener pull handle (B).

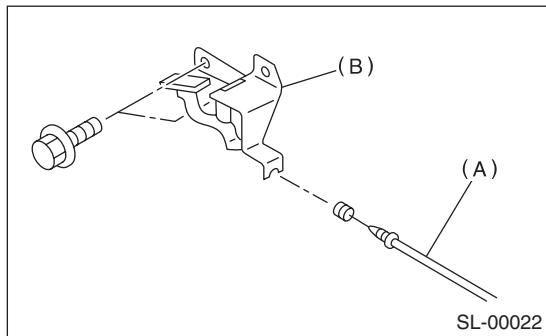

- 6) Rotate the fuel lock inside the quarter panel to the left and remove.

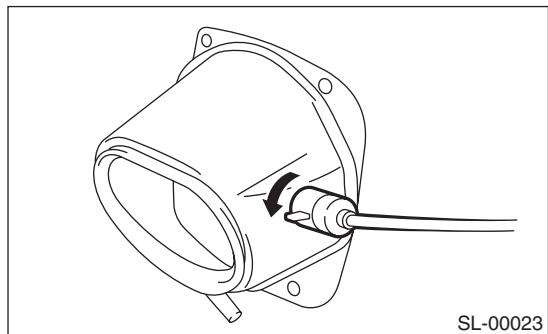

### B: INSTALLATION

Install in the reverse order of removal.

**Tightening torque:**  
7.5 N·m (0.76 kgf·m, 5.5 ft-lb)

### C: INSPECTION

Check that the front hood and fuel flap open and close smoothly.