


26. Immobilizer Control Module

A: REMOVAL

NOTE:

- Prepare the security ID plate.
- Prepare all registered immobilizer keys for the model with immobilizer.
- When replacing the immobilizer control module, register the immobilizer. At that time, a new immobilizer key is required. Refer to the REGISTRATION MANUAL FOR IMMOBILIZER.
- If not replacing the immobilizer control module, re-registration of a key used before is not required.
- If not replacing the immobilizer control module, a maximum of four keys, including the added key, can be registered.

- 1) Disconnect the ground cable from the battery.
- 2) Remove the instrument panel lower cover. <Ref. to EI-38, REMOVAL, Instrument Panel Assembly.>
- 3) Disconnect the connector from immobilizer control module.
- 4) Remove the immobilizer control module.

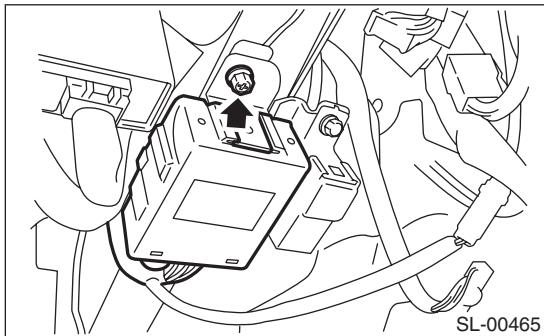

B: INSTALLATION

Install in the reverse order of removal.