


## 27. Immobilizer Antenna


### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the instrument panel lower cover. <Ref. to EI-38, REMOVAL, Instrument Panel Assembly.>
- 3) Remove the screws, and detach the upper column cover and lower column cover.

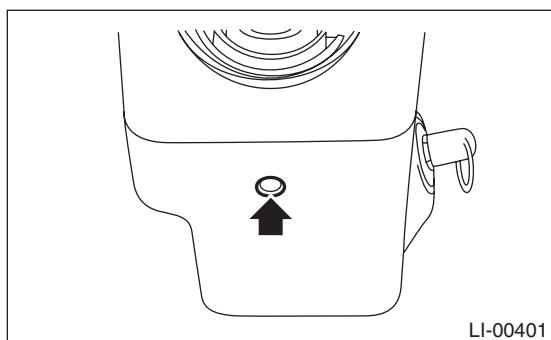


LI-00401

- 4) Disconnect the immobilizer antenna connector (A) from body harness.

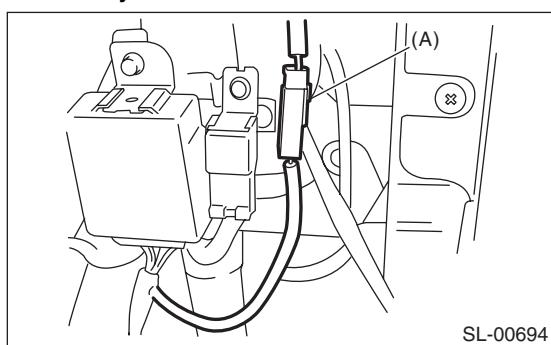

SL-00694

- 5) Remove the screws and detach the immobilizer antenna (B).
- 6) Remove the valve (C) of the key ring illumination.

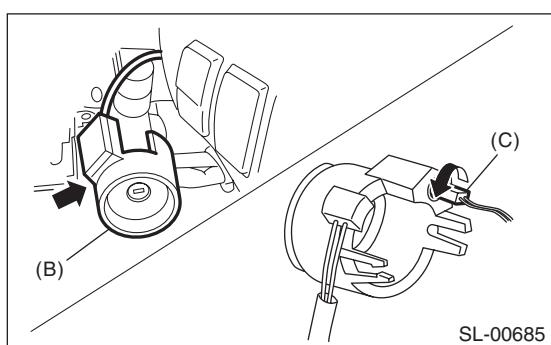

SL-00685

### B: INSTALLATION

Install in the reverse order of removal.

## **Immobilizer Antenna**

**SECURITY AND LOCKS**

---