


5. Front Inner Remote

A: REMOVAL

- 1) Remove the door trim. <Ref. to EI-33, REMOV-AL, Front Door Trim.>
- 2) Remove the sealing cover. <Ref. to EB-13, REMOVAL, Front Sealing Cover.>
- 3) Remove the one screw and two cables.
- 4) Remove the front inner remote.

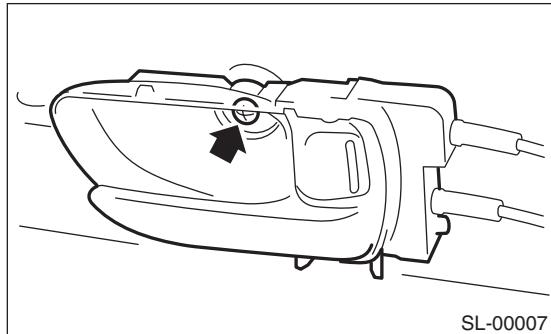

SL-00007

B: INSTALLATION

NOTE:

Check the following items during installation.

- Is the cable damaged such as any fray, etc.?
- Is grease sufficiently applied to the cable connection? (When the remote handle is a chrome plated type)

If there is not enough grease, assemble the cable after applying additional grease.

Install in the reverse order of removal.

C: INSPECTION

- 1) Make sure the cable is not deformed.
- 2) Make sure the lever and cable move smoothly.

NOTE:

If the remote handle is a chrome plated type, check that there is plenty of grease applied to the cable joint of the remote handle.

If there is not enough grease, assemble the cable after applying additional grease.