



7. Front Door Latch and Door Lock Actuator Assembly

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the front door trim. <Ref. to EI-33, REMOVAL, Front Door Trim.>
- 3) Remove the sealing cover. <Ref. to EB-13, REMOVAL, Front Sealing Cover.>
- 4) Remove the front inner remote. <Ref. to SL-28, REMOVAL, Front Inner Remote.>
- 5) Remove the two bolts and one nut to remove the guide rail.

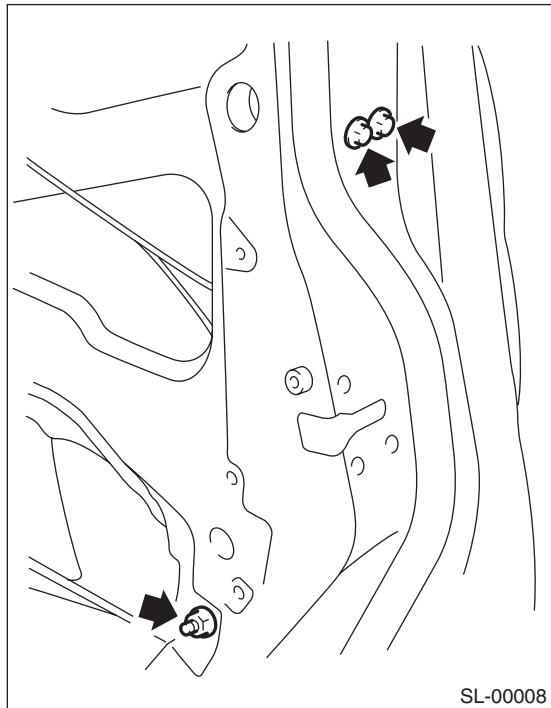

- 6) Remove the three screws and one bolt.

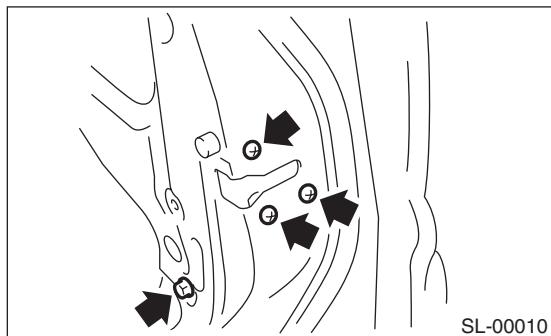

- 7) Remove the front door latch assembly, and disconnect the connector.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Door latch mounting screw

$6.5 \text{ N}\cdot\text{m} (0.66 \text{ kgf}\cdot\text{m}, 4.8 \text{ ft}\cdot\text{lb})$

Door lock actuator mounting bolt

$7.5 \text{ N}\cdot\text{m} (0.76 \text{ kgf}\cdot\text{m}, 5.5 \text{ ft}\cdot\text{lb})$

NOTE:

Make sure the door lock works properly after installation.

C: INSPECTION

After the installation, inspect the following items.

- Do the lever, rod and cable move smoothly?
- Does the cable have any snags?