


9. Rear Inner Remote

A: REMOVAL

- 1) Remove the rear door trim. <Ref. to EI-34, REMOVAL, Rear Door Trim.>
- 2) Remove the sealing cover. <Ref. to EB-16, REMOVAL, Rear Sealing Cover.>
- 3) Remove the one screw and two cables.
- 4) Remove the inner remote.

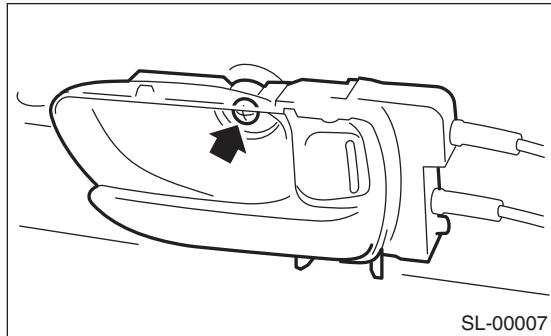

B: INSTALLATION

NOTE:

At installation, check the following items.

- Does the cable have any snags?
- Is grease sufficiently applied to the cable connection? (When the remote handle is a chrome plated type)
If there is not enough grease, assemble the cable after applying additional grease.
- Install in the reverse order of removal.

C: INSPECTION

After the installation, inspect the following items.

- Do the lever and cable move smoothly?
- After closing the door, does the inner remote work properly?
- Do the rear door child safety locks operate properly?