


6. Front Wiper Arm

A: REMOVAL


- 1) Open the front hood.
- 2) Remove the cap, and loosen the nut.

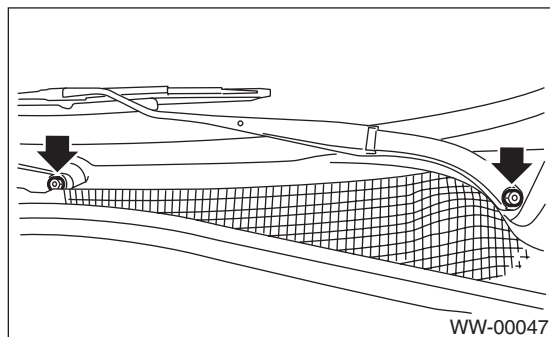

- 3) Remove the wiper arm assembly.

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Operate the wiper once.
- 3) Align the wiper blade to ceramic print point mark (A) of front window panel.

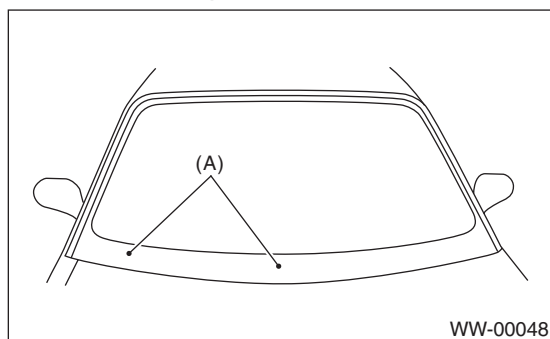

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to WW-2, FRONT WIPER, COMPONENT, General Description.>

C: ADJUSTMENT

Operate the wiper once. Align the wiper blade to ceramic print point mark (A) of front window panel.

