

## 6. Front Tone Wheel

### A: REMOVAL

The front tone wheel is integrated with the front drive shaft. Refer to the section on Front Drive Shaft.

<Ref. to DS-30, REMOVAL, Front Drive Shaft.>

### B: INSTALLATION

The front tone wheel is integrated with the front drive shaft. Refer to the section on Front Drive Shaft.

<Ref. to DS-31, INSTALLATION, Front Drive Shaft.>

### C: INSPECTION

Visually check the tone wheel's teeth (44 pieces) for cracks or dents. If necessary, replace with a new tone wheel.

NOTE:

Replace the AC assembly with a new part if there is any defect found on the tone wheel, since it is unitized with the AC assembly of the drive shaft.