

### 7. Rear Tone Wheel

#### A: REMOVAL

The rear tone wheel is attached to the rear hub. Refer to Rear Axle.

<Ref. to DS-22, REMOVAL, Rear Axle.>

#### B: INSTALLATION

The rear tone wheel is attached to the rear hub. Refer to Rear Axle.

<Ref. to DS-25, INSTALLATION, Rear Axle.>

#### C: INSPECTION

Visually check the tone wheel's teeth (44 pieces) for cracks or dents. If necessary, replace with a new tone wheel.