

## **Read Diagnostic Trouble Code (DTC)**

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

---

### **6. Read Diagnostic Trouble Code (DTC)**

#### **A: OPERATION**

For details regarding reading of DTCs, refer to “Subaru Select Monitor”. <Ref. to TPM(diag)-8, Subaru Select Monitor.>