

4. Oil Seal

A: NOTE

For removal, installation and inspection, refer to the “4AT” or the “5MT” section.

AT model:

<Ref. to 4AT-45, Extension Case Oil Seal.>

MT model:

<Ref. to 5MT-34, Oil Seal.>