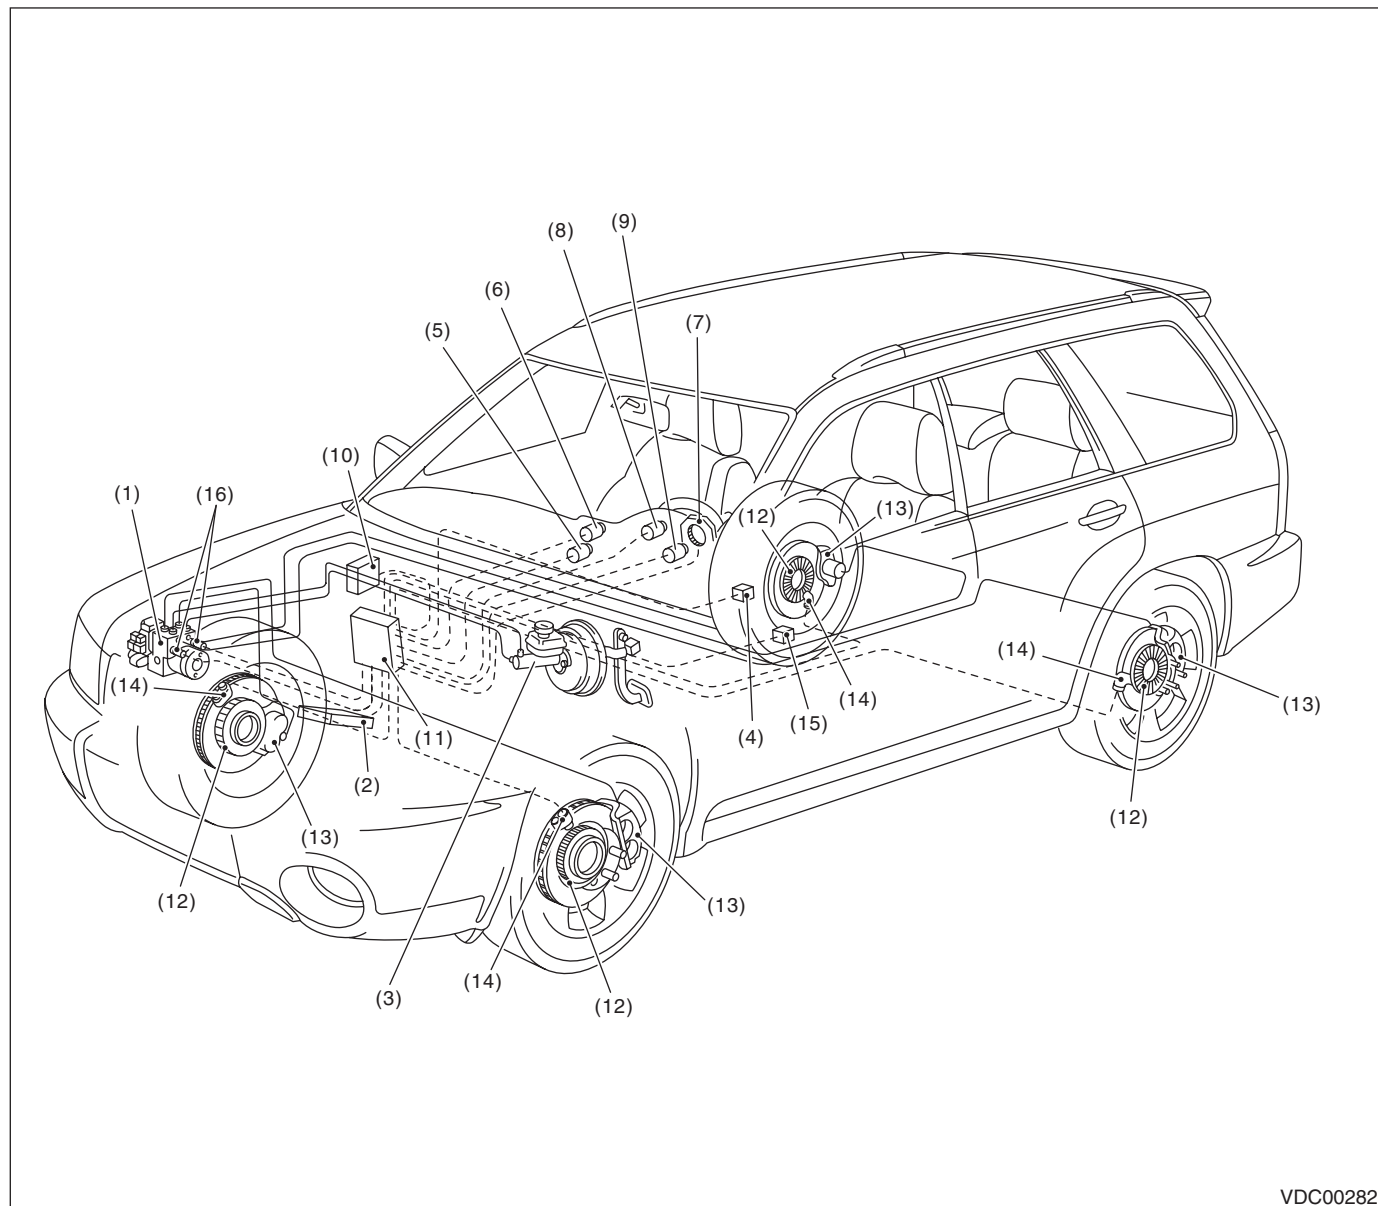


Electrical Component Location

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

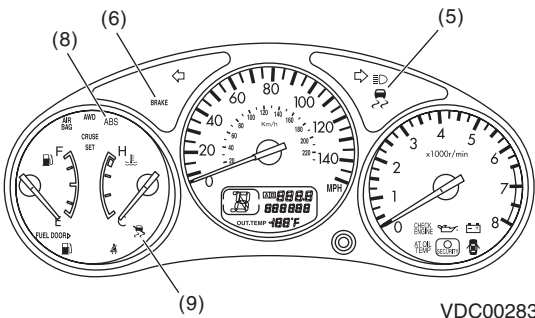
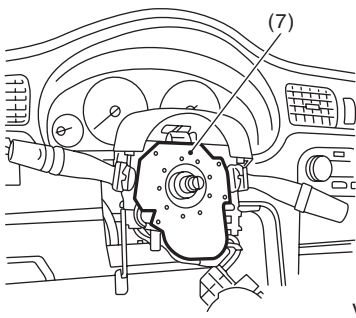
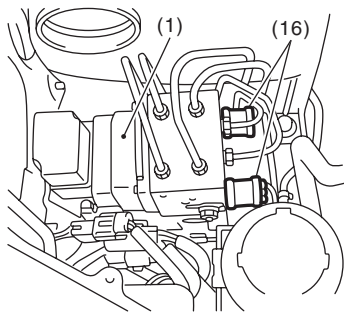
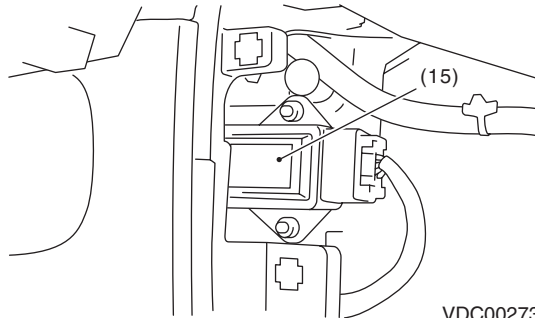
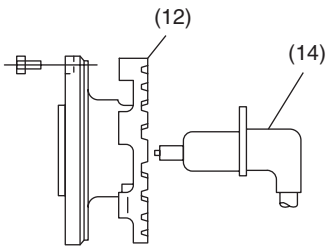
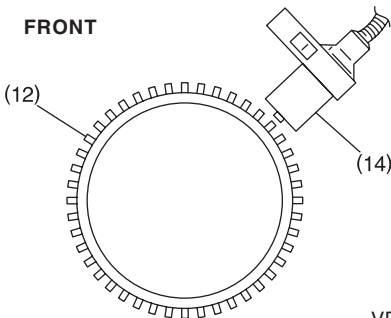


VDC00282

- | | | |
|---|---|----------------------------------|
| (1) VDC hydraulic control unit (VDCH/U) | (7) Steering angle sensor | (11) VDC control module (VDCCM) |
| (2) Engine control module (ECM) | (8) ABS warning light | (12) Tone wheel |
| (3) Master cylinder | (9) VDC warning light/VDC OFF indicator light | (13) Wheel cylinder |
| (4) VDC OFF switch | (10) Transmission control module (TCM) | (14) ABS wheel speed sensor |
| (5) VDC indicator light | | (15) Yaw rate & lateral G sensor |
| (6) Brake warning light (EBD warning light) | | (16) Pressure sensor |

Electrical Component Location

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

 VDC00283	 VDC00009
 VDC00004	 VDC00273
REAR  VDC00167	FRONT  VDC00008