

Read Diagnostic Trouble Code (DTC)

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

8. Read Diagnostic Trouble Code (DTC)

A: OPERATION

For details concerning DTC, refer to the “Subaru Select Monitor”. <Ref. to VDC(diag)-17, Subaru Select Monitor.>When doing so, read the detail code displayed under the DTC at the same time.