

11. Rear Tone Wheel

A: REMOVAL

Remove the bolt to remove the hub from the tone wheel.

<Ref. to DS-22, REMOVAL, Rear Axle.>

B: INSTALLATION

Remove any dirt on the contact surface of the hub and tone wheel, then install the tone wheel to the hub using the bolts.

<Ref. to DS-25, INSTALLATION, Rear Axle.>

C: INSPECTION

Visually check the tone wheel's teeth (44 pieces) for cracks or dents. If necessary, replace with a new tone wheel.