


VDC OFF Switch

VEHICLE DYNAMICS CONTROL (VDC)

12. VDC OFF Switch


A: REMOVAL

- 1) Disconnect the ground cable from the battery.

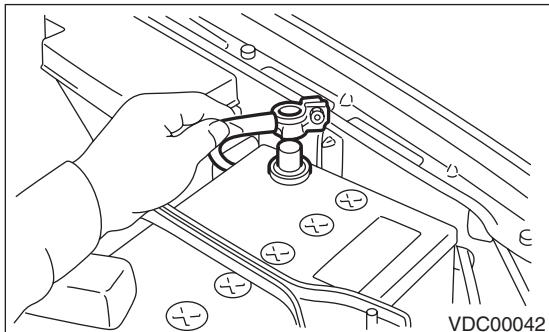

- 2) Remove the instrument panel lower cover. <Ref. to EI-38, REMOVAL, Instrument Panel Assembly.>


- 3) Disconnect the VDC OFF switch connector, push outside, and press the VDC OFF switch.

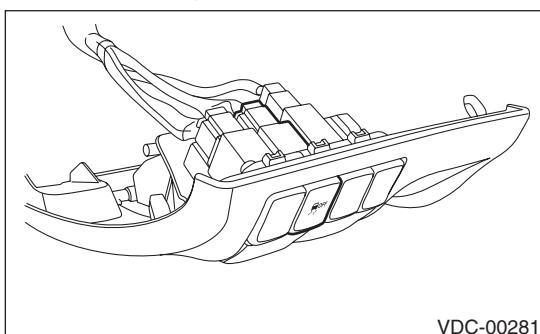

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

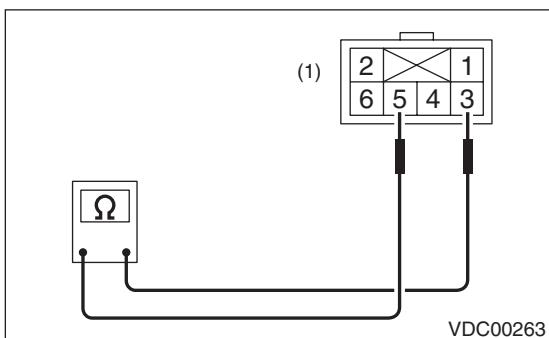

(1) VDC OFF switch side

Inspect the resistance between VDC OFF switch terminals.

Switch position	Tester connection	Standard
OFF	3 — 5	1 MΩ or more
ON	3 — 5	Less than 1 Ω

If NG, replace the VDC OFF switch.