

### 11. Coolant Filler Tank

#### A: REMOVAL


**NOTE:**

The coolant filler tank is mounted on the turbo model.

**CAUTION:**

**The radiator is pressurized. Wait until engine cools down before working on the radiator.**


- 1) Remove the collector cover.
- 2) Drain approximately 3.0 ℥ (3.2 US qt, 2.6 Imp qt) of engine coolant. <Ref. to CO(H4SO)-17, DRAINING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>
- 3) Remove the air cleaner upper cover and air intake boot. <Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>
- 4) Remove the air cleaner element.
- 5) Disconnect the engine coolant hoses from coolant filler tank.

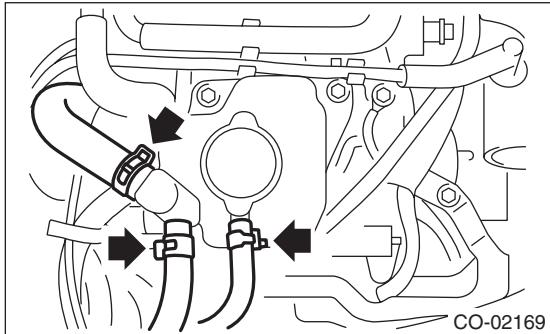

6) Remove the bolts and nuts which install coolant filler tank.

7) Disconnect the engine coolant hose which connects the under side of coolant filler tank.

- 8) Remove the coolant filler tank.

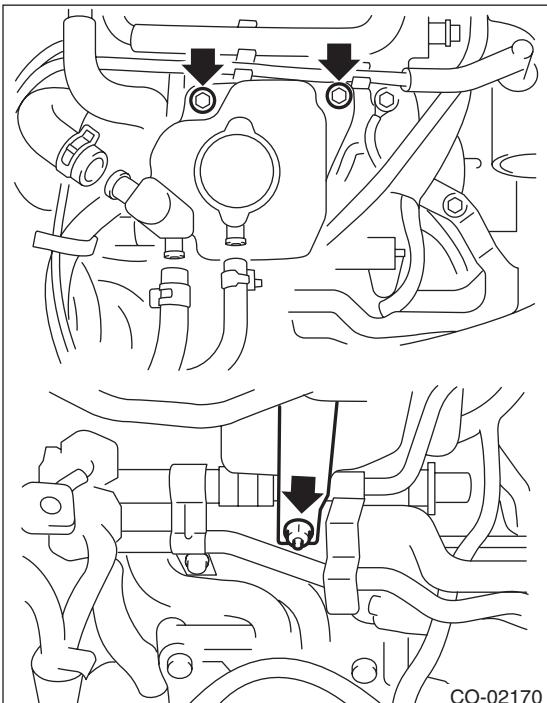


#### B: INSTALLATION

- 1) Install in the reverse order of removal.

**Tightening torque:**

**T1: 16 N·m (1.6 kgf-m, 11.8 ft-lb)**

**T2: 13 N·m (1.3 kgf-m, 9.6 ft-lb)**

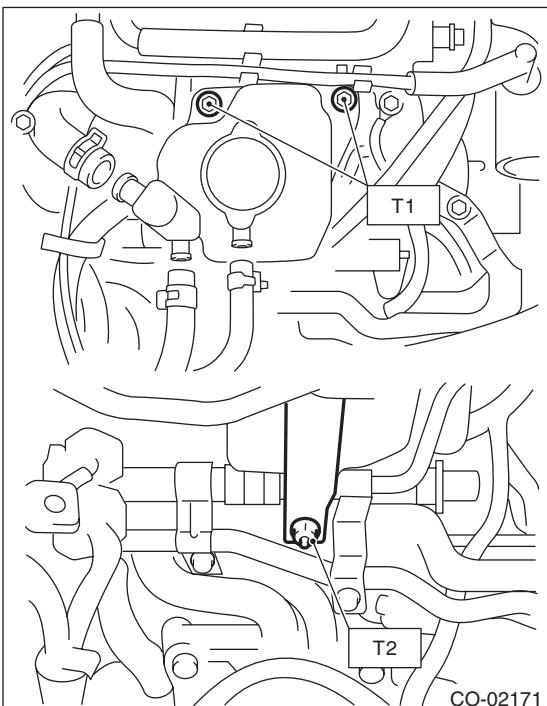

- 2) Fill engine coolant. <Ref. to CO(H4SO)-17, FILLING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>