

10. Fuel Tank Pressure Sensor

A: REMOVAL


WARNING:

Place "NO FIRE" signs near the working area.


CAUTION:

Be careful not to spill fuel.

- 1) Remove the fuel tank. <Ref. to FU(H4SO)-46, REMOVAL, Fuel Tank.>
- 2) Remove the protect cover.

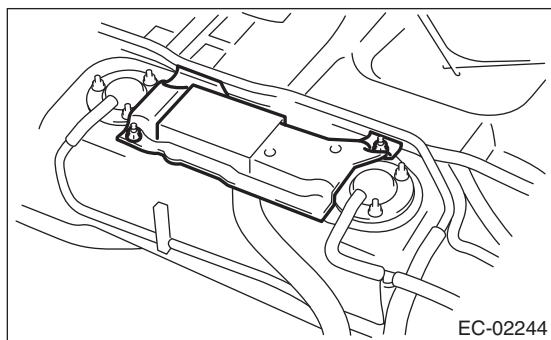

- 3) Disconnect the connector from the fuel tank pressure sensor.
- 4) Remove the nuts that secure the fuel tank pressure sensor to the bracket, and disconnect the pressure hose from the fuel tank pressure sensor.

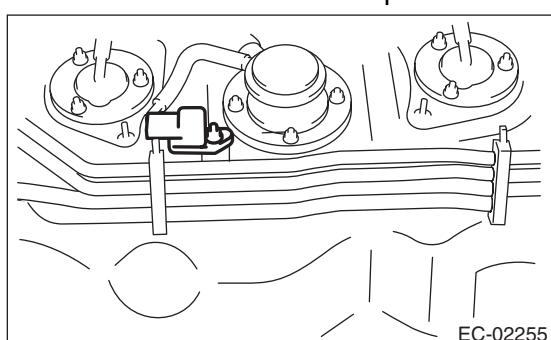


B: INSTALLATION


Install in the reverse order of removal.

Tightening torque:

7.4 N·m (0.75 kgf·m, 5.4 ft-lb)

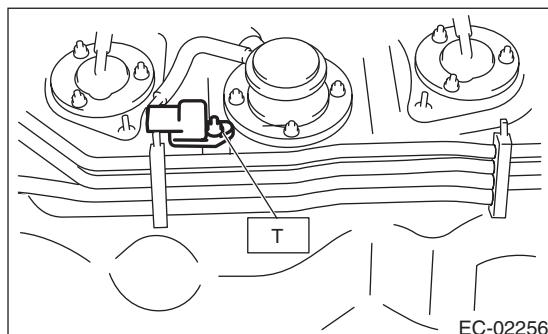**Tightening torque:**

4.4 N·m (0.45 kgf·m, 3.3 ft-lb)

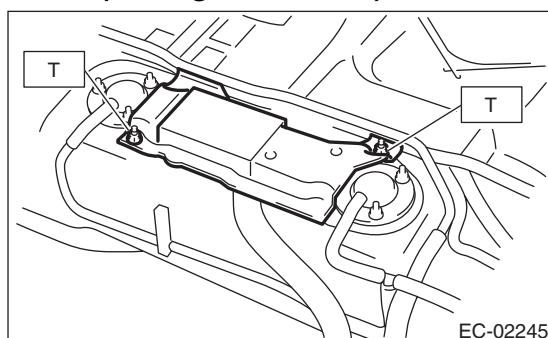

C: INSPECTION

Make sure the hoses are not cracked or loose.