

Vent Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

13. Vent Valve

A: REMOVAL

WARNING:


Place "NO FIRE" signs near the working area.

CAUTION:

Be careful not to spill fuel.


1) Remove the fuel tank. <Ref. to FU(H4SO)-46, REMOVAL, Fuel Tank.>

2) Remove the protect cover.

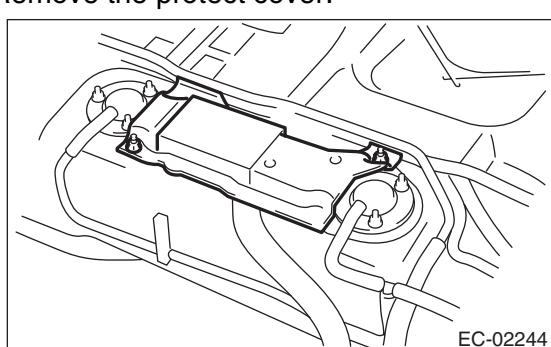


EC-02244

3) Remove the clip and disconnect the hose from the vent valve.

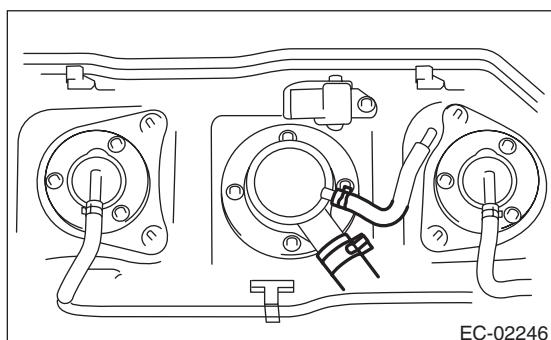

EC-02246

4) Remove the nut and then remove the vent valve.

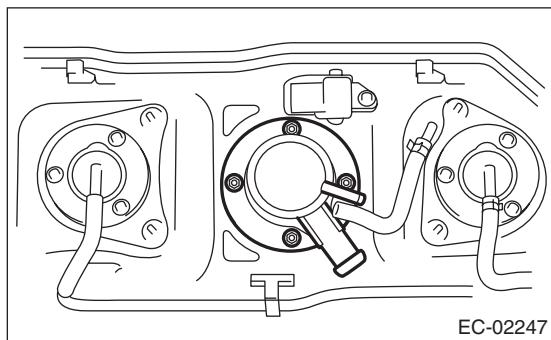

EC-02247

B: INSTALLATION


Install in the reverse order of removal.

NOTE:

Use a new gasket.

Tightening torque:


4.4 N·m (0.45 kgf-m, 3.3 ft-lb)

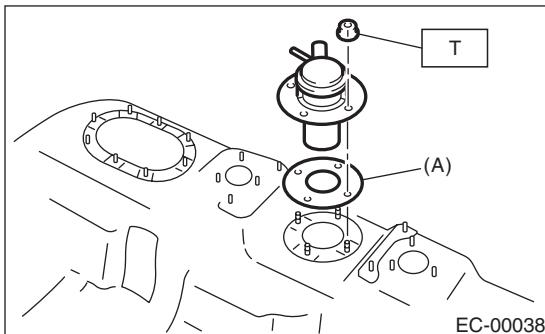

(A) Gasket

Tightening torque:

4.4 N·m (0.45 kgf-m, 3.3 ft-lb)

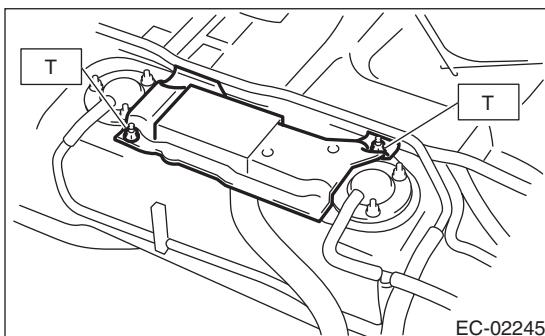

C: INSPECTION

Make sure the hoses are not cracked or loose.