

14. Shut Valve

A: REMOVAL


WARNING:

Place "NO FIRE" signs near the working area.

CAUTION:


Be careful not to spill fuel.

- 1) Remove the fuel filler pipe.
<Ref. to FU(H4SO)-49, REMOVAL, Fuel Filler Pipe.>
- 2) Disconnect the evaporation hose from the shut valve.

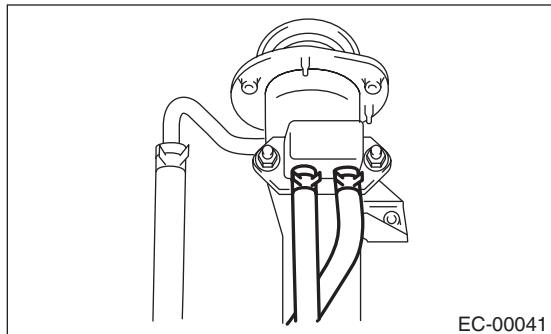

EC-00041

- 3) Remove the shut valve from the fuel filler pipe.

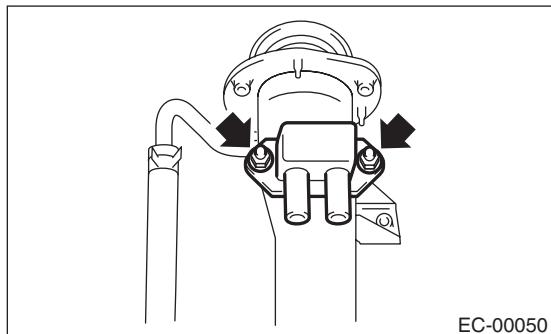


EC-00050

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

4.5 N·m (0.46 kgf·m, 3.3 ft-lb)

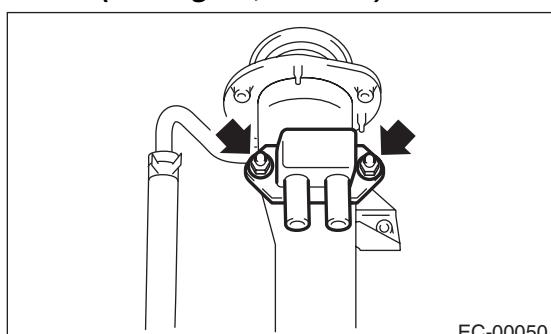

EC-00050

C: INSPECTION

Make sure the hoses are not cracked or loose.