

7. Fuel Level Sensor

A: REMOVAL

Refer to the “FU” section for removal procedure.

<Ref. to FU(H4SO)-55, REMOVAL, Fuel Level Sensor.>

B: INSTALLATION

Refer to the “FU” section for installation procedure.

<Ref. to FU(H4SO)-55, INSTALLATION, Fuel Level Sensor.>