

Fuel Sub Level Sensor

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

9. Fuel Sub Level Sensor

A: REMOVAL

Refer to the “FU” section for removal procedure.
<Ref. to FU(H4SO)-56, REMOVAL, Fuel Sub Level Sensor.>

B: INSTALLATION

Refer to the “FU” section for installation procedure.
<Ref. to FU(H4SO)-56, INSTALLATION, Fuel Sub Level Sensor.>