

10. Read Diagnostic Trouble Code (DTC)

A: OPERATION

1. SUBARU SELECT MONITOR (NORMAL MODE)

- 1) On the «Main Menu» display screen, select the {Each System Check}.
- 2) On the «System Selection Menu» display screen, select the {Engine Control System}.
- 3) Click the [OK] button after the information of engine type has been displayed.
- 4) On the «Engine Diagnosis» display screen, select the {Diagnostic Code(s) Display}.
- 5) On the «Diagnostic Code(s) Display» screen, select the {Temporary Code} or {Memory Code}.

NOTE:

- For detailed operation procedure, refer to the “PC application help for Subaru Select Monitor”.
- For details concerning DTC, refer to “List of Diagnostic Trouble Code (DTC)”. <Ref. to EN(H4SO)(diag)-88, List of Diagnostic Trouble Code (DTC).>

2. SUBARU SELECT MONITOR (OBD MODE)

- 1) On the «Main Menu» display screen, select the {Each System Check}.
- 2) On the «System Selection Menu» display screen, select the {Engine Control System}.
- 3) Click the [OK] button after the information of engine type has been displayed.
- 4) On the «Engine Diagnosis» display screen, select the {OBD System}.
- 5) On the «OBD Menu» display screen, select the {Diagnostic Code(s) Display}.
- 6) Make sure DTC is shown on the screen.

NOTE:

- For detailed operation procedure, refer to the “PC application help for Subaru Select Monitor”.
- For details concerning DTC, refer to “List of Diagnostic Trouble Code (DTC)”. <Ref. to EN(H4SO)(diag)-88, List of Diagnostic Trouble Code (DTC).>

3. GENERAL SCAN TOOL

Refer to data denoting emission-related powertrain DTC.

For details concerning DTC, refer to “List of Diagnostic Trouble Code (DTC)”. <Ref. to EN(H4SO)(diag)-88, List of Diagnostic Trouble Code (DTC).>

NOTE:

Refer to general scan tool manufacturer’s instruction manual to access powertrain DTC (MODE \$03).