

13. Clear Memory Mode

A: OPERATION

1. SUBARU SELECT MONITOR (NORMAL MODE)

- 1) On the «Main Menu» display screen, select the {Each System Check}.
- 2) On the «System Selection Menu» display screen, select the {Engine Control System}.
- 3) Click the [OK] button after the information of engine type has been displayed.
- 4) On the «Engine Diagnosis» display screen, select the {Clear Memory}.
- 5) When the “Clear Memory?” is shown on the screen, click the [Yes] button.
- 6) When “Done” and “Turn ignition switch to OFF” is shown on the display screen, turn the ignition switch to OFF.

NOTE:

- Initial diagnosis of the electronic throttle control is performed after the memory is erased. Therefore, start the engine after 10 seconds or more have passed since turning the ignition switch to ON.
- For detailed operation procedure, refer to the “PC application help for Subaru Select Monitor”.

2. SUBARU SELECT MONITOR (OBD MODE)

- 1) On the «Main Menu» display screen, select the {Each System Check}.
- 2) On the «System Selection Menu» display screen, select the {Engine Control System}.
- 3) Click the [OK] button after the information of engine type has been displayed.
- 4) On the «Engine Diagnosis» display screen, select the {OBD System}.
- 5) On the «OBD Menu» display screen, select the {Clear Diagnostic Code?}.
- 6) When the «Clear Diagnostic Code?» is shown on the screen, click the [Yes] button.
- 7) When «Done» and «Turn ignition switch to OFF» is shown on the display screen, turn the ignition switch to OFF.

NOTE:

For detailed operation procedure, refer to the “PC application help for Subaru Select Monitor”.

3. GENERAL SCAN TOOL

For clear memory procedures using the general scan tool, refer to “General Scan Tool Instruction Manual”.

NOTE:

Initial diagnosis of the electronic throttle control is performed after the memory is erased. Therefore, start the engine after 10 seconds or more have passed since turning the ignition switch to ON.