

## 3. Center Exhaust Pipe

### A: REMOVAL

After removing the center and front exhaust pipes as one unit, separate them. Refer to "Front Exhaust Pipe" for removal procedure. <Ref. to EX(H4SO)-4, REMOVAL, Front Exhaust Pipe.>

### B: INSTALLATION

Install the center exhaust pipe and front exhaust pipe as one unit. Refer to "Front Exhaust Pipe" for installation procedure. <Ref. to EX(H4SO)-5, INSTALLATION, Front Exhaust Pipe.>

### C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.