


# Manifold Absolute Pressure Sensor

FUEL INJECTION (FUEL SYSTEMS)


## 9. Manifold Absolute Pressure Sensor

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.

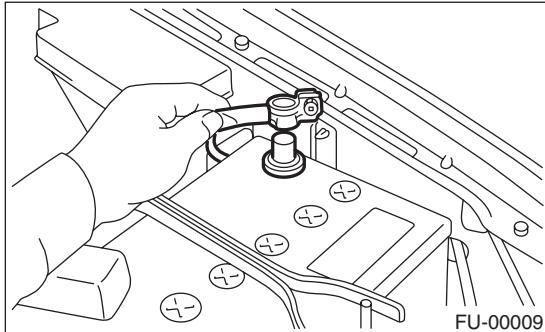

- 2) Disconnect the connector from manifold absolute pressure sensor.

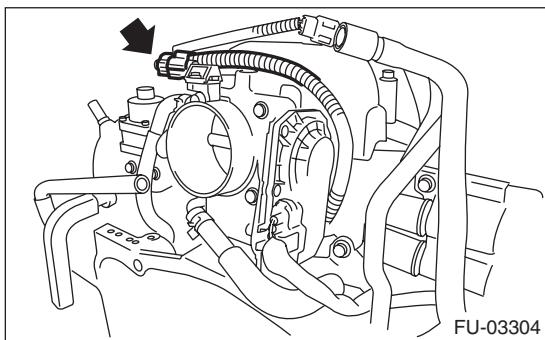

- 3) Remove the manifold absolute pressure sensor from throttle body.

### B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Use new O-rings.

***Tightening torque:***

***2.0 N·m (0.20 kgf·m, 1.5 ft-lb)***