


General Description

INTAKE (INDUCTION)

1. General Description

A: COMPONENT

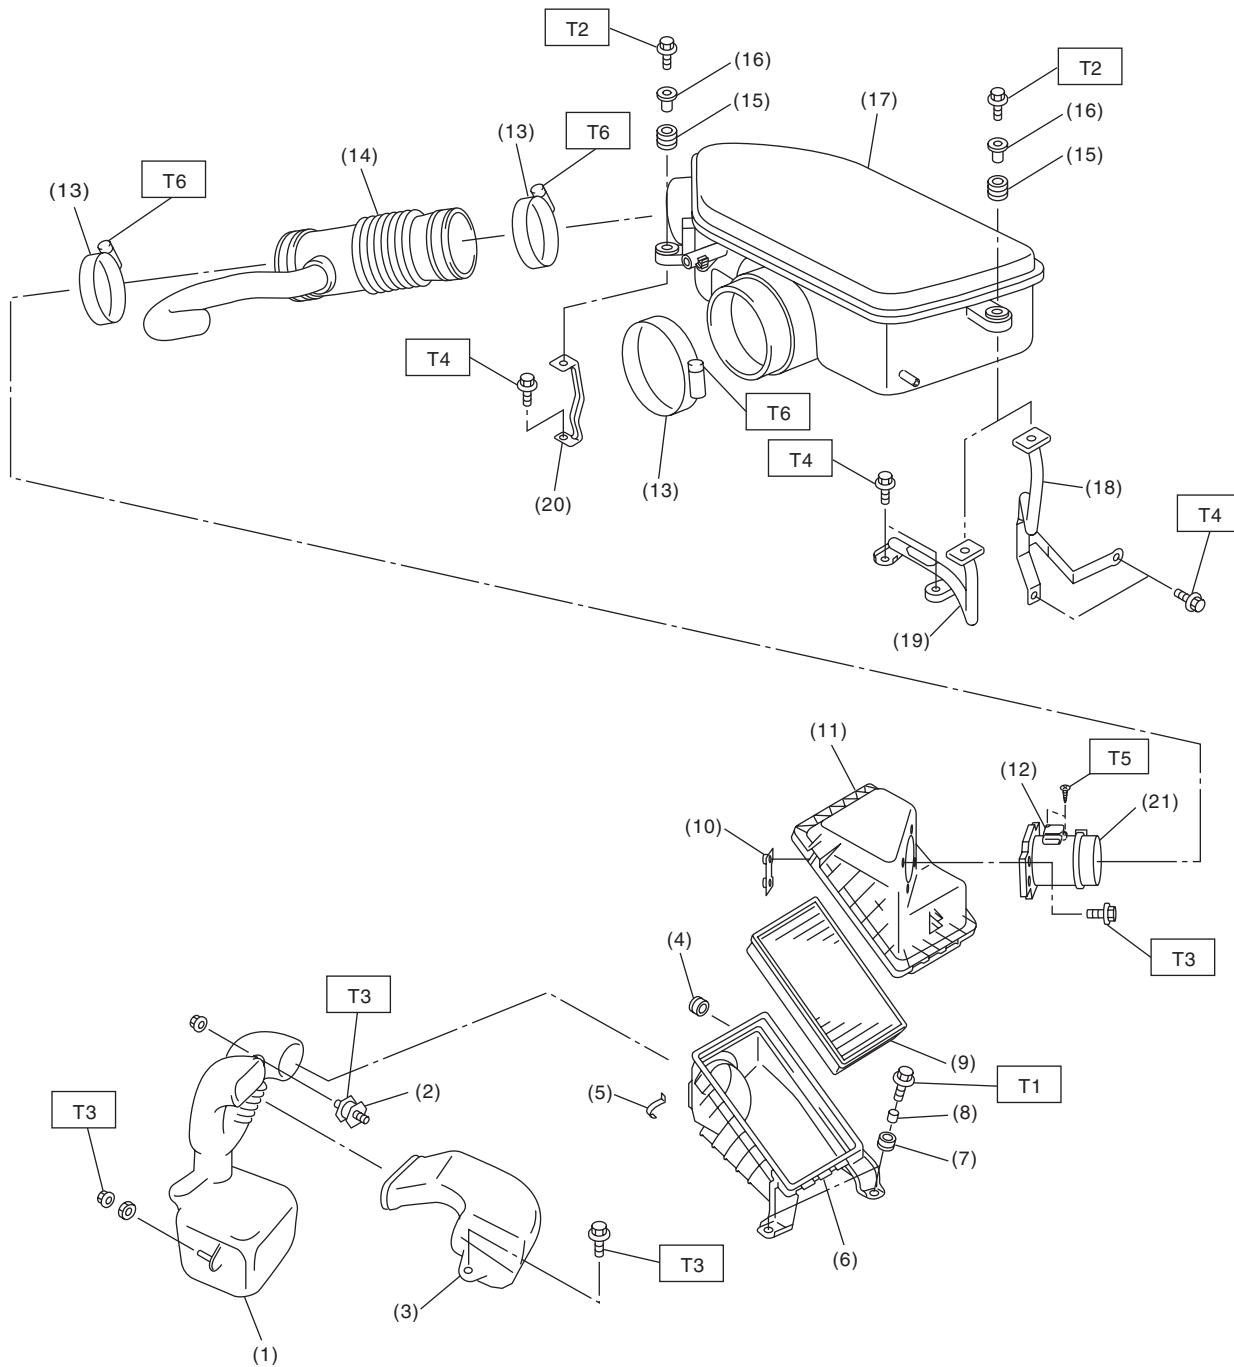

IN-02202

General Description

INTAKE (INDUCTION)

| | | |
|----------------------------|--|---|
| (1) Resonator chamber | (11) Air cleaner upper cover (with a HC adsorption filter: U5 model) | (20) Stay RH |
| (2) Cushion | (12) Air flow sensor | (21) Duct |
| (3) Air intake duct | (13) Clamp | Tightening torque:N·m (kgf·m, ft·lb) |
| (4) Cushion | (14) Intake boot | T1: 33 (3.4, 24.3) |
| (5) Clip | (15) Cushion | T2: 6.5 (0.66, 4.8) |
| (6) Air cleaner lower case | (16) Spacer | T3: 7.5 (0.76, 5.5) |
| (7) Cushion | (17) Air intake chamber | T4: 16 (1.6, 11.8) |
| (8) Spacer | (18) Stay LH (MT model) | T5: 1.0 (0.10, 0.7) |
| (9) Air cleaner element | (19) Stay LH (AT model) | T6: 3.0 (0.3, 2.1) |

B: CAUTION

- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from the battery.