


Air Cleaner Element

INTAKE (INDUCTION)

2. Air Cleaner Element

A: REMOVAL

- 1) Remove the clips (B) on air cleaner case.

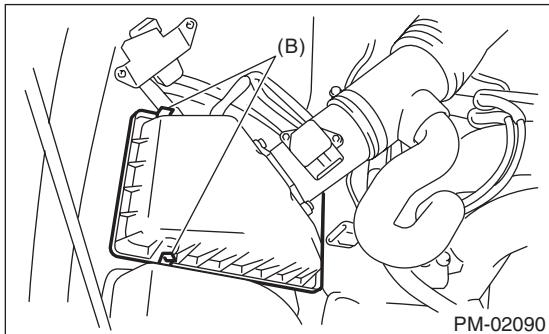


- 2) Remove the air cleaner element.

B: INSTALLATION


Install in the reverse order of removal.

NOTE:

- The air cleaner element differs depending on the destination market. For the specification of U5 model, refer to the NOTE (A) on the upper side of air cleaner upper cover.

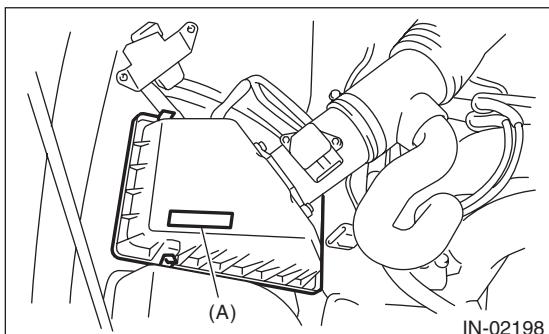

- Fasten with a clip after inserting the lower tab of case.

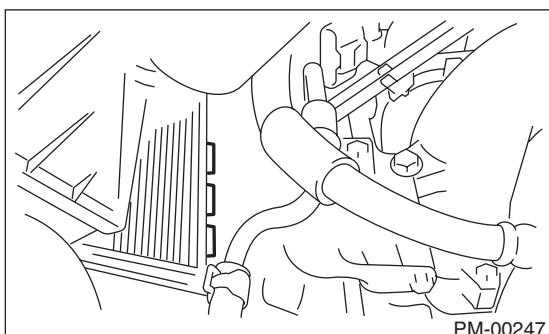

C: INSPECTION

- 1) Replace with a new part if the air cleaner element is extremely damaged or dirty.
- 2) Replace the air cleaner upper cover when the HC adsorption filter is damaged. (U5 model)