

23. Intake and Exhaust Valve

A: SPECIFICATION

Refer to "Cylinder Head" for removal and installation procedures of intake and exhaust valves. <Ref. to ME(H4SO)-61, REMOVAL, Cylinder Head.> <Ref. to ME(H4SO)-62, INSTALLATION, Cylinder Head.>