

## 26.Crankshaft

### A: SPECIFICATION

Refer to “Cylinder Block” for removal and installation procedures of the crankshaft. <Ref. to ME(H4SO)-70, REMOVAL, Cylinder Block.> <Ref. to ME(H4SO)-74, INSTALLATION, Cylinder Block.>