



2. Accelerator Pedal

A: REMOVAL

- 1) Disconnect the ground cable from battery.

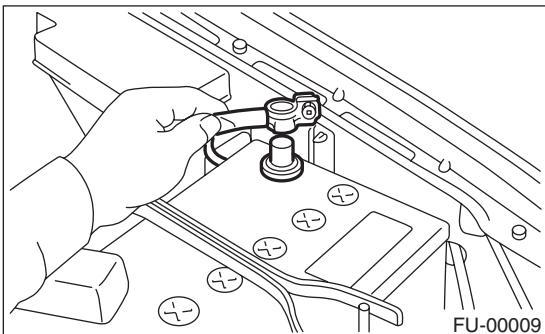

- 2) Disconnect the connector (A).
- 3) Remove the nut (B) securing accelerator pedal assembly.

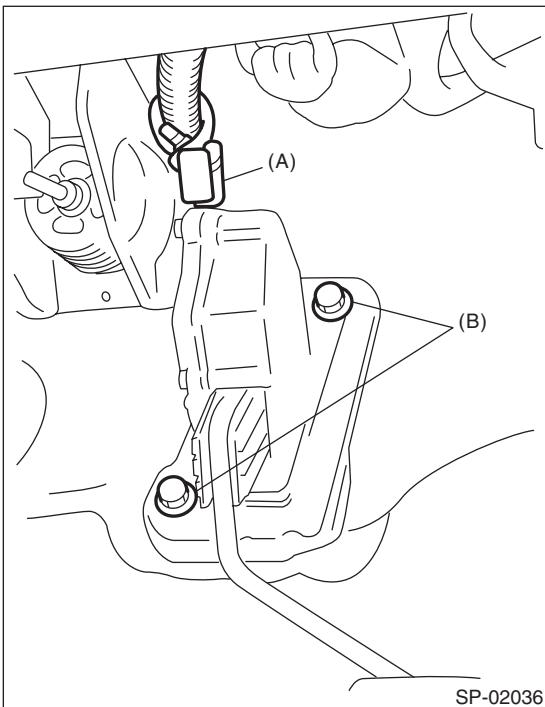

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

18 N·m (1.8 kgf·m, 13.3 ft-lb)

C: DISASSEMBLY

NOTE:

Accelerator pedal cannot be disassembled.

Accelerator Pedal

SPEED CONTROL SYSTEMS
