

### 10. Fuel Sub Level Sensor

#### A: REMOVAL

Refer to the FU (H4DOTC) section for removal procedure. <Ref. to FU(H4DOTC)-62, REMOVAL, Fuel Sub Level Sensor.>

#### B: INSTALLATION

Refer to the FU (H4DOTC) section for installation procedure. <Ref. to FU(H4DOTC)-62, INSTALLATION, Fuel Sub Level Sensor.>