



## 16.Drain Valve

### A: REMOVAL

- 1) Set the vehicle on a lift.
- 2) Disconnect the ground cable from the battery.

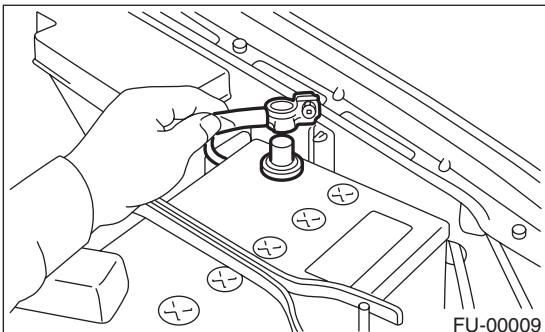

- 3) Lift up the vehicle.
- 4) Remove the canister. <Ref. to EC(H4DOTC)-7, REMOVAL, Canister.>
- 5) Disengage the clip, then remove the drain valve from the canister.

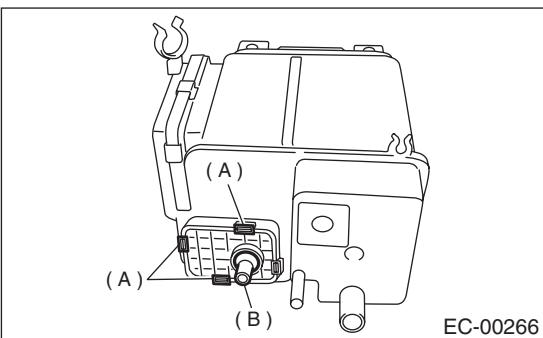


(A) Clip  
(B) Drain valve

### B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Use a new clip.

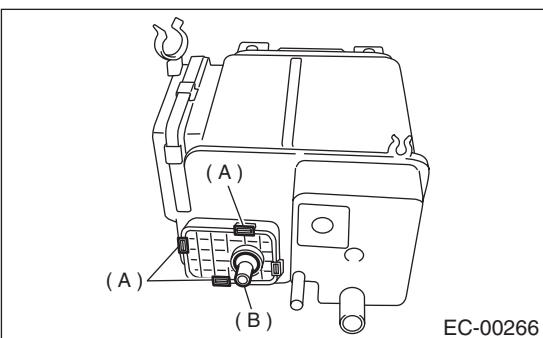

(A) Clip  
(B) Drain valve

### C: INSPECTION

- 1) Make sure that all hoses are properly connected.
- 2) Make sure the hoses are not cracked or loose.