

## 17.PCV Hose Assembly

### A: REMOVAL

**CAUTION:**

**Do not remove if the PCV hose, diagnostics connector and PCV valve are not damaged.**


1) Remove the intake manifold.

<Ref. to FU(H4DOTC)-14, REMOVAL, Intake Manifold. >

2) Fit the depression in the ST with the protrusion on the clamp to unlock.

3) Remove the PCV hose assembly.

ST 18353AA000 CLAMP PLIERS

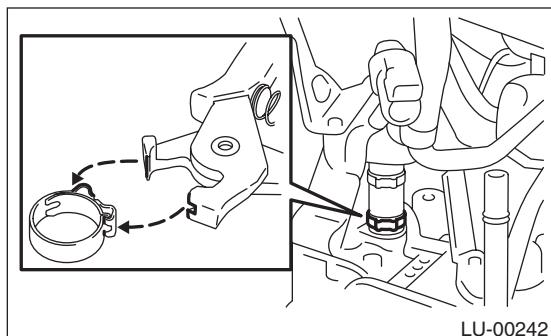


### B: INSTALLATION

1) Install the PCV hose assembly, then lock by fitting the ST on the clamp protrusion.

**NOTE:**

Use a new clamp.

ST 18353AA000 CLAMP PLIERS

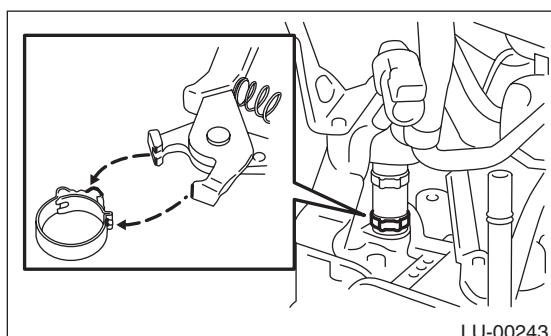

2) Install the intake manifold.

<Ref. to FU(H4DOTC)-17, INSTALLATION, Intake Manifold. >