


Purge Control Solenoid Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

5. Purge Control Solenoid Valve


A: REMOVAL

- 1) Disconnect the ground cable from the battery.

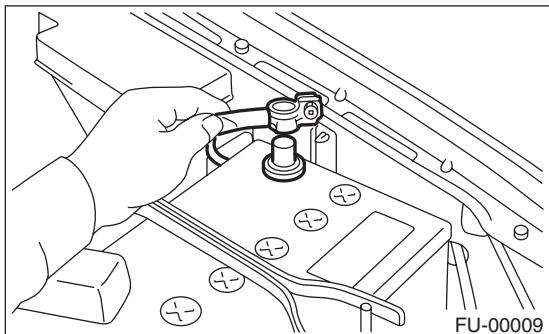

- 2) Disconnect the connector and hoses from purge control solenoid valve.

- 3) Loosen the bolt and remove the purge control solenoid valve from the intake manifold.

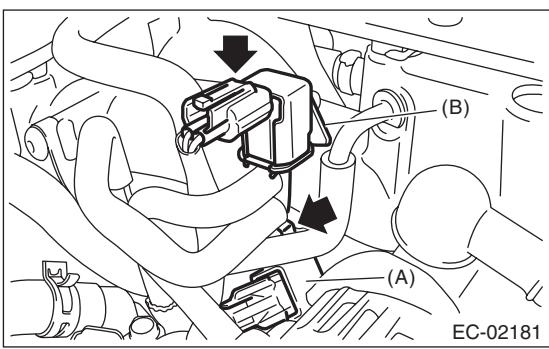


- (A) Purge control solenoid valve 1
- (B) Purge control solenoid valve 2

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:


19 N·m (1.9 kgf·m, 14.0 ft-lb)

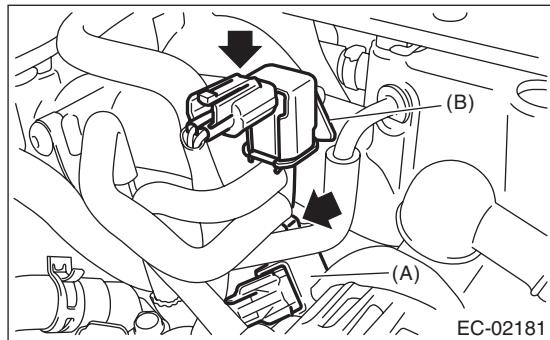

- (A) Purge control solenoid valve 1
- (B) Purge control solenoid valve 2

NOTE:

Connect the evaporation hose as shown in the figure.

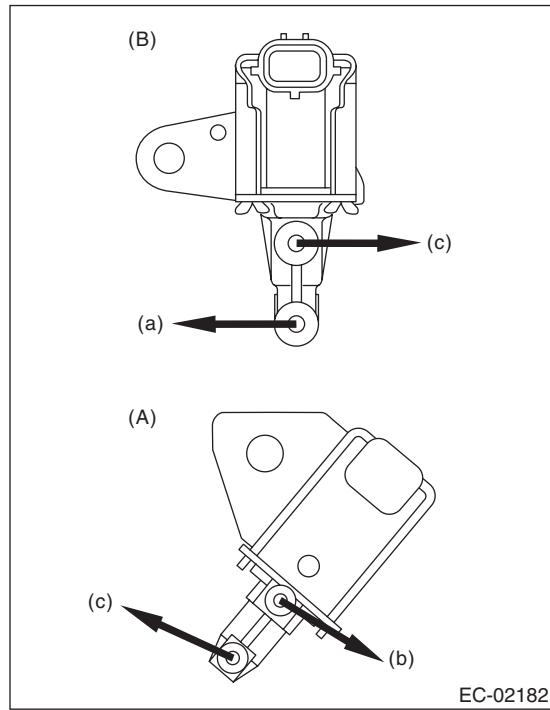

- (A) Purge control solenoid valve 1
- (B) Purge control solenoid valve 2
- (a) To intake duct
- (b) To intake manifold
- (c) To splitter and then to fuel pipe

C: INSPECTION

Make sure the hoses are not cracked or loose.