



6. Secondary Air Pump

A: REMOVAL

- 1) Disconnect the ground cable from the battery.

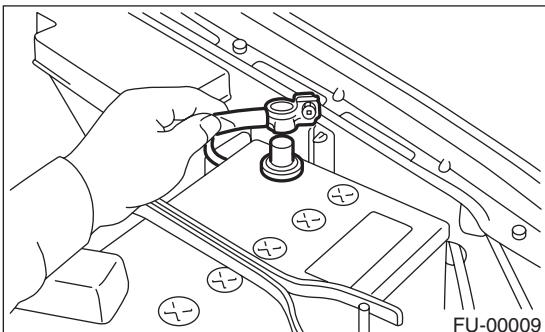

- 2) Disconnect the connector (A) from secondary air pump.
- 3) Disconnect the hose (B) from secondary air pump.
- 4) Remove the bolt (C) which secures the secondary air pump to the body.

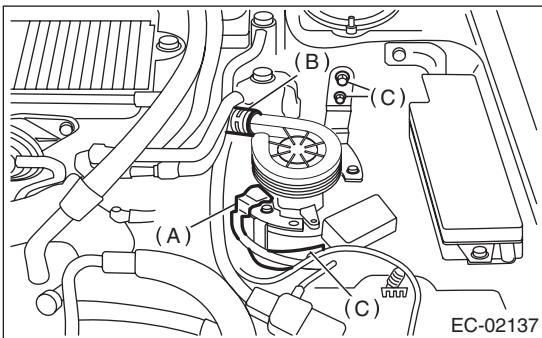


B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

5 N·m (0.5 kgf·m, 3.7 ft-lb)

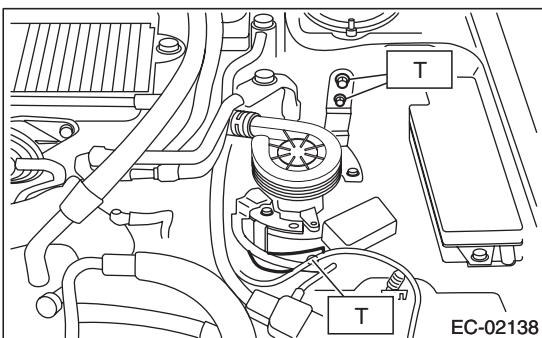

C: INSPECTION

Make sure the hoses are not cracked or loose.